
REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


2. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER

(a) Disengage the 2 claws and 2 clips and remove the instrument panel finish panel lower center.

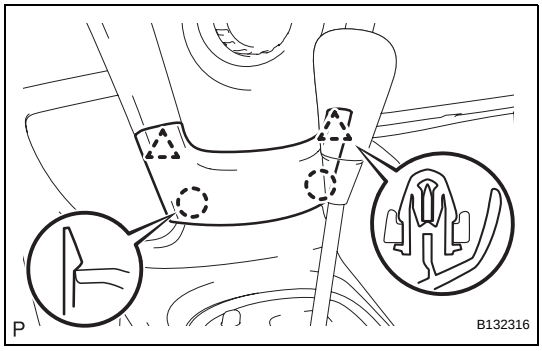


3. REMOVE INSTRUMENT PANEL FINISH PANEL END LH


(a) Disengage the 6 claws and 3 clips and remove the instrument panel finish panel end LH.

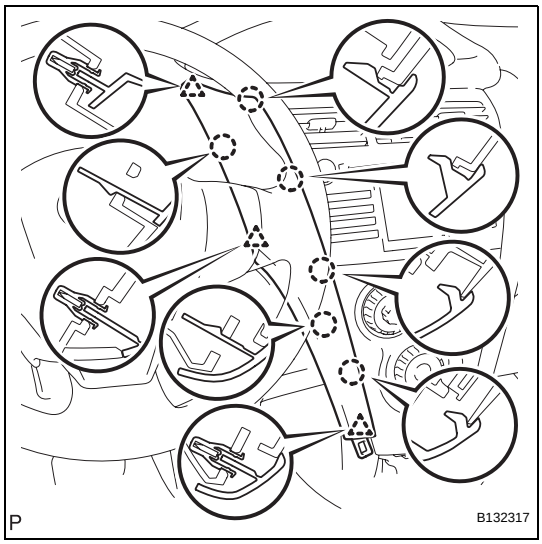

4. REMOVE INSTRUMENT PANEL FINISH PANEL END RH


(a) Disengage the 6 claws and 3 clips and remove the instrument panel finish panel end RH.

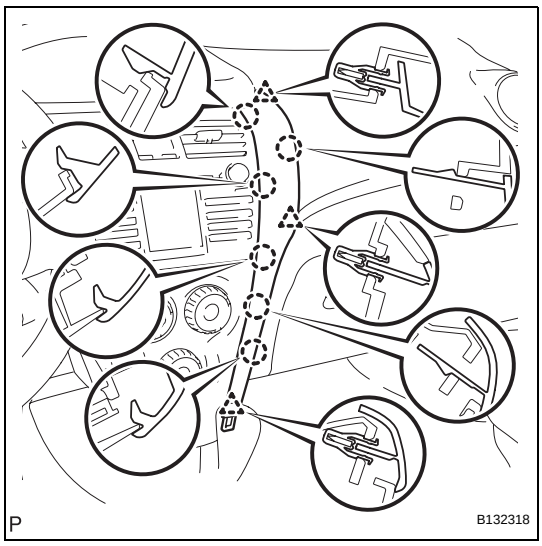

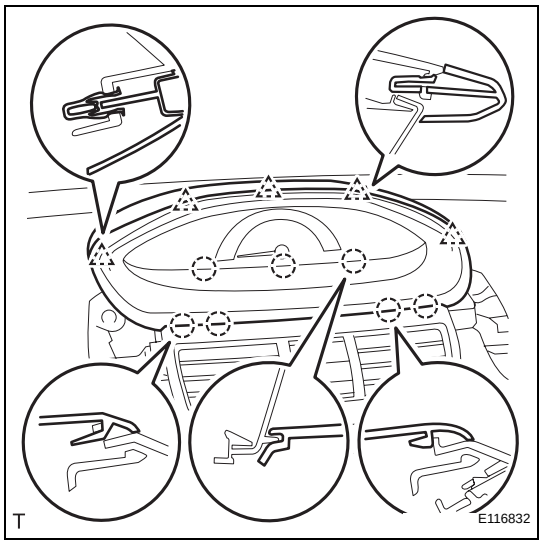

5. REMOVE INSTRUMENT CLUSTER FINISH PANEL

(a) Disengage the 7 claws and 5 clips and remove the instrument cluster finish panel.

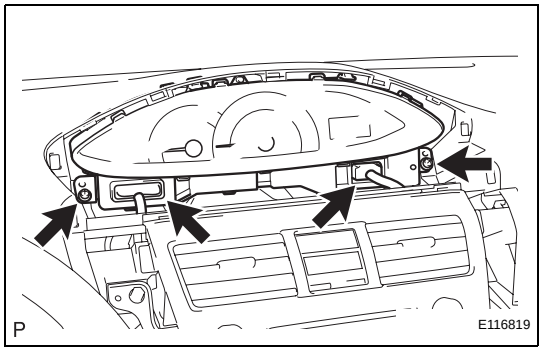


6. REMOVE COMBINATION METER ASSEMBLY

(a) Disconnect the 2 connectors.

(b) Remove the 2 screws and pull the combination meter rearward to remove it.

ME

DISASSEMBLY

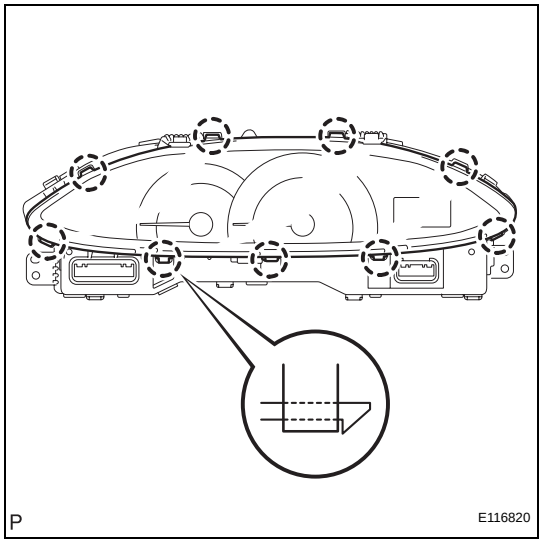

1. REMOVE COMBINATION METER GLASS

(a) Disengage the 9 claws and remove the combination meter glass.