
8. Fuel Pump Control

A fuel cut control is used to stop the fuel pump when the SRS airbag is deployed at the front, side or rear side collision.
In this system, the airbag deployment signal from the airbag assembly is detected by the ECM, and it turns OFF the circuit opening relay.
After the fuel cut control has been activated, turning the ignition switch from OFF to ON cancels the fuel cut control, thus can be restarted.

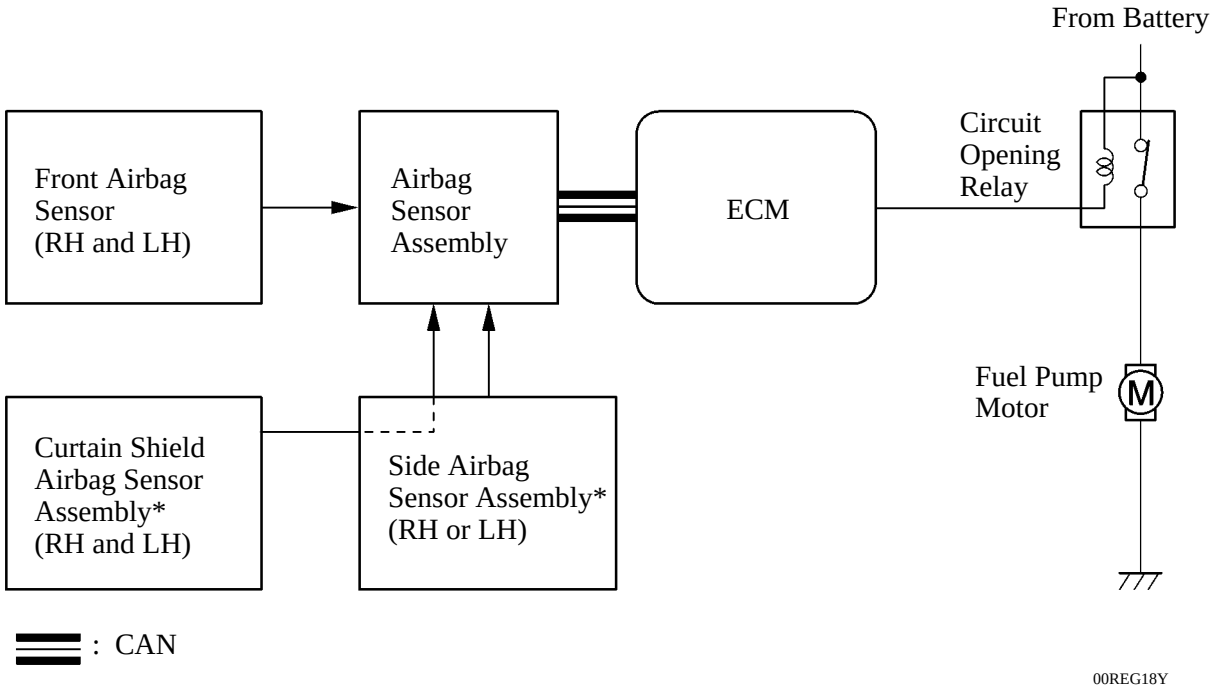

*: Option Equipment