POWER WINDOW SYSTEM

■DESCRIPTION


The power window system is provided as optional equipment on the ’06 models.

The power window system has the following functions:

Function	Outline
Manual-up-and-down Function	The manual-up-and-down function causes the window to open or close while the power window switch is being pulled halfway up or pushed halfway down. The window stops as soon as the switch is released.
Driver’s Door One-touch Auto Down Function	The driver’s door one-touch auto down function is used in the driver’s window. The driver’s door one-touch auto down function enables the window of driver’s door to be fully opened at a touch of the power window switch.
Remote Control Function	The up-and-down operations of the front passenger door window and the rear door windows*can be controlled by operating the power window master switch.


*: Only for 5-door Hatchback Models

▶ System Diagram ◀

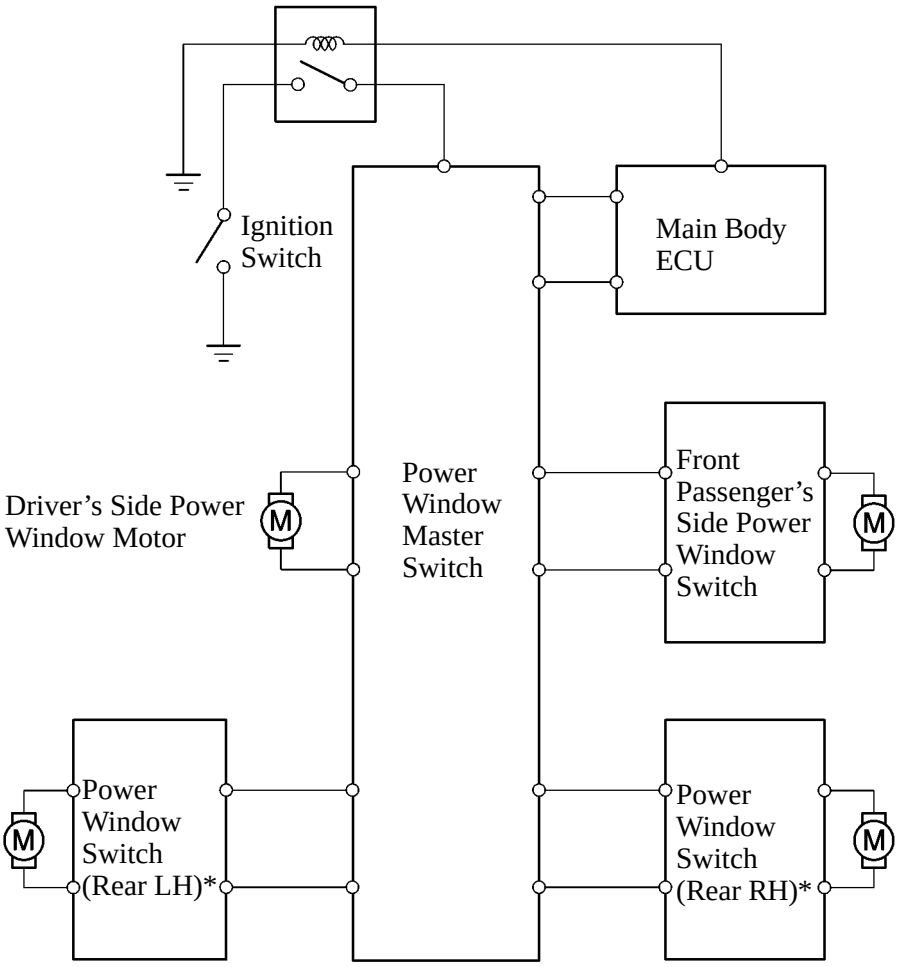

*: Only for 5-door Hatchback Models

■LAYOUT OF MAIN COMPONENTS

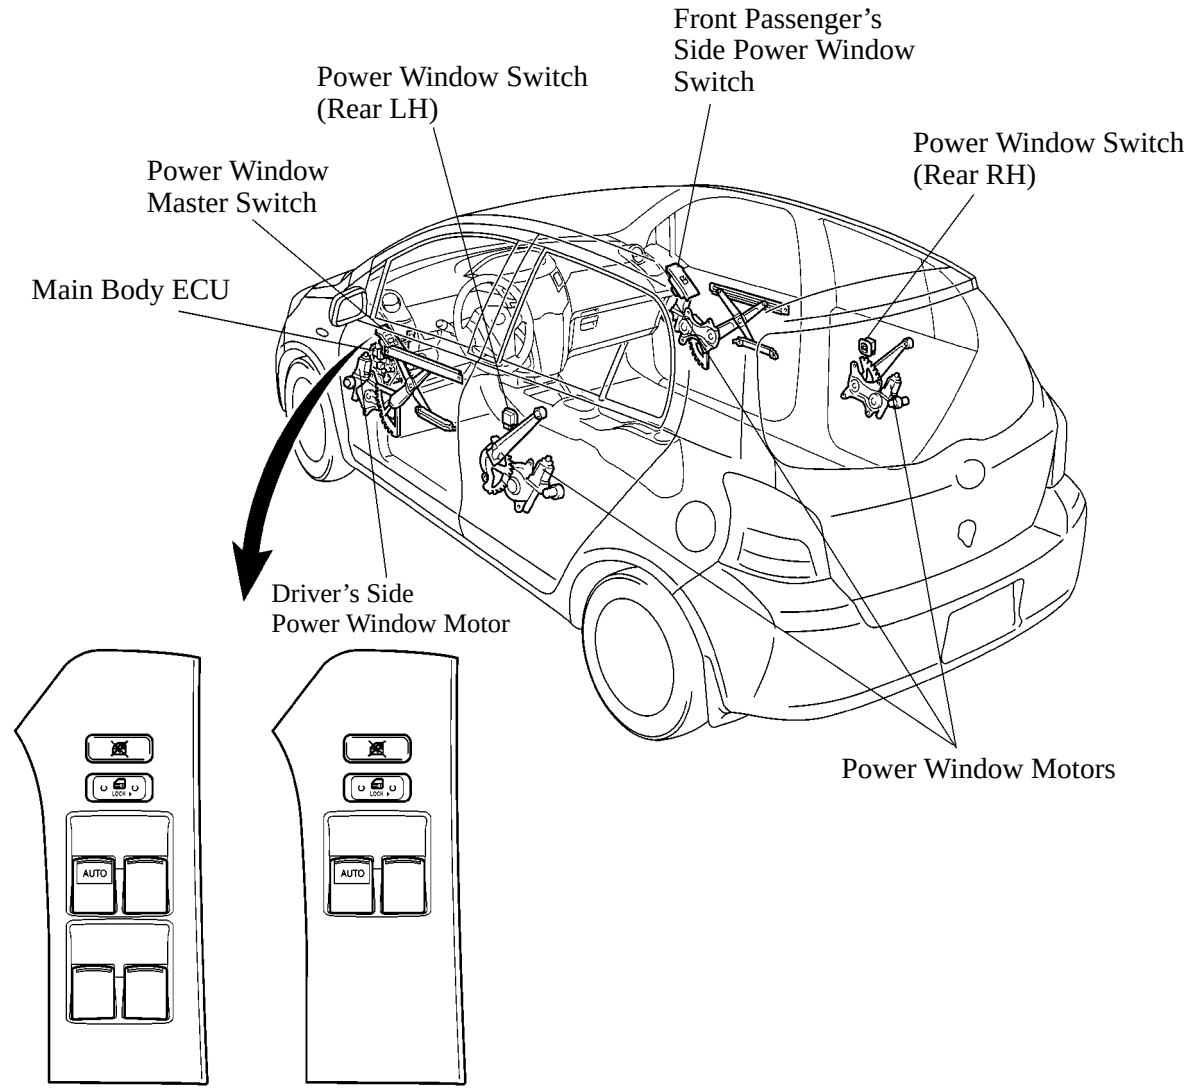

5-door Hatchback Models **3-door Hatchback Models**

00RBE25Y