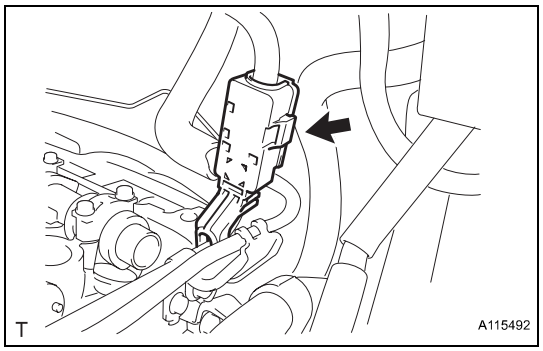
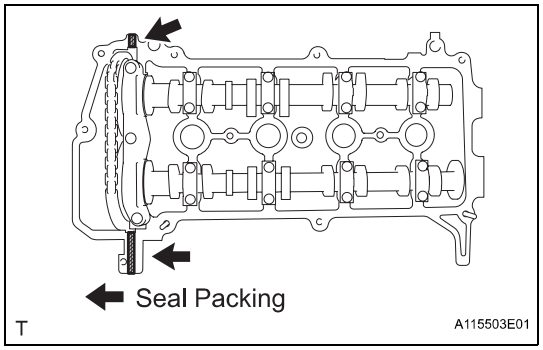


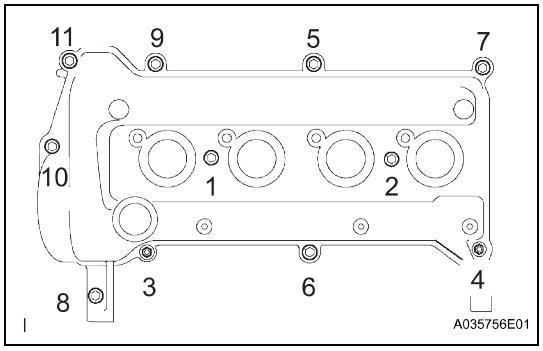

(b) Install the fuel pipe clamp.



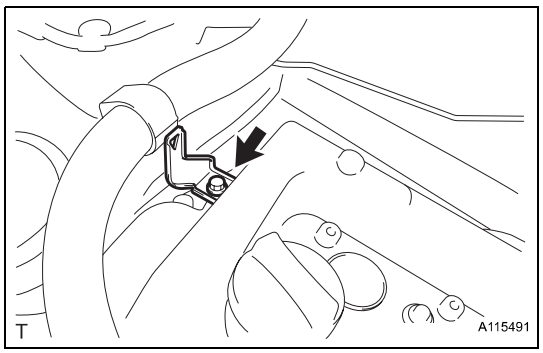

**6. INSTALL CYLINDER HEAD COVER SUB-ASSEMBLY**

(a) Apply seal packing to the cylinder head as shown in the illustration.
**Seal Packing:**
**Toyota Genuine Seal Packing Black, Three Bond 1207B or Equivalent**
**NOTICE:**
- **Remove any oil from the contact surface.**
- **Install the cylinder head cover sub-assembly within 3 minutes of applying the seal packing.**
- **Do not start the engine for at least 2 hours after the installation.**

(b) Install the cylinder head cover sub-assembly with the 9 bolts, 2 nuts and 2 seal washers.




(c) Tighten the 9 bolts and 2 nuts in the sequence shown in the illustration.
**Torque: 10 N*m (102 kgf*cm, 7.0 ft.*lbf)**




(d) Install the wire harness bracket with the bolt.
**Torque: 13 N*m (133 kgf*cm, 9.6 ft.*lbf)**

FU