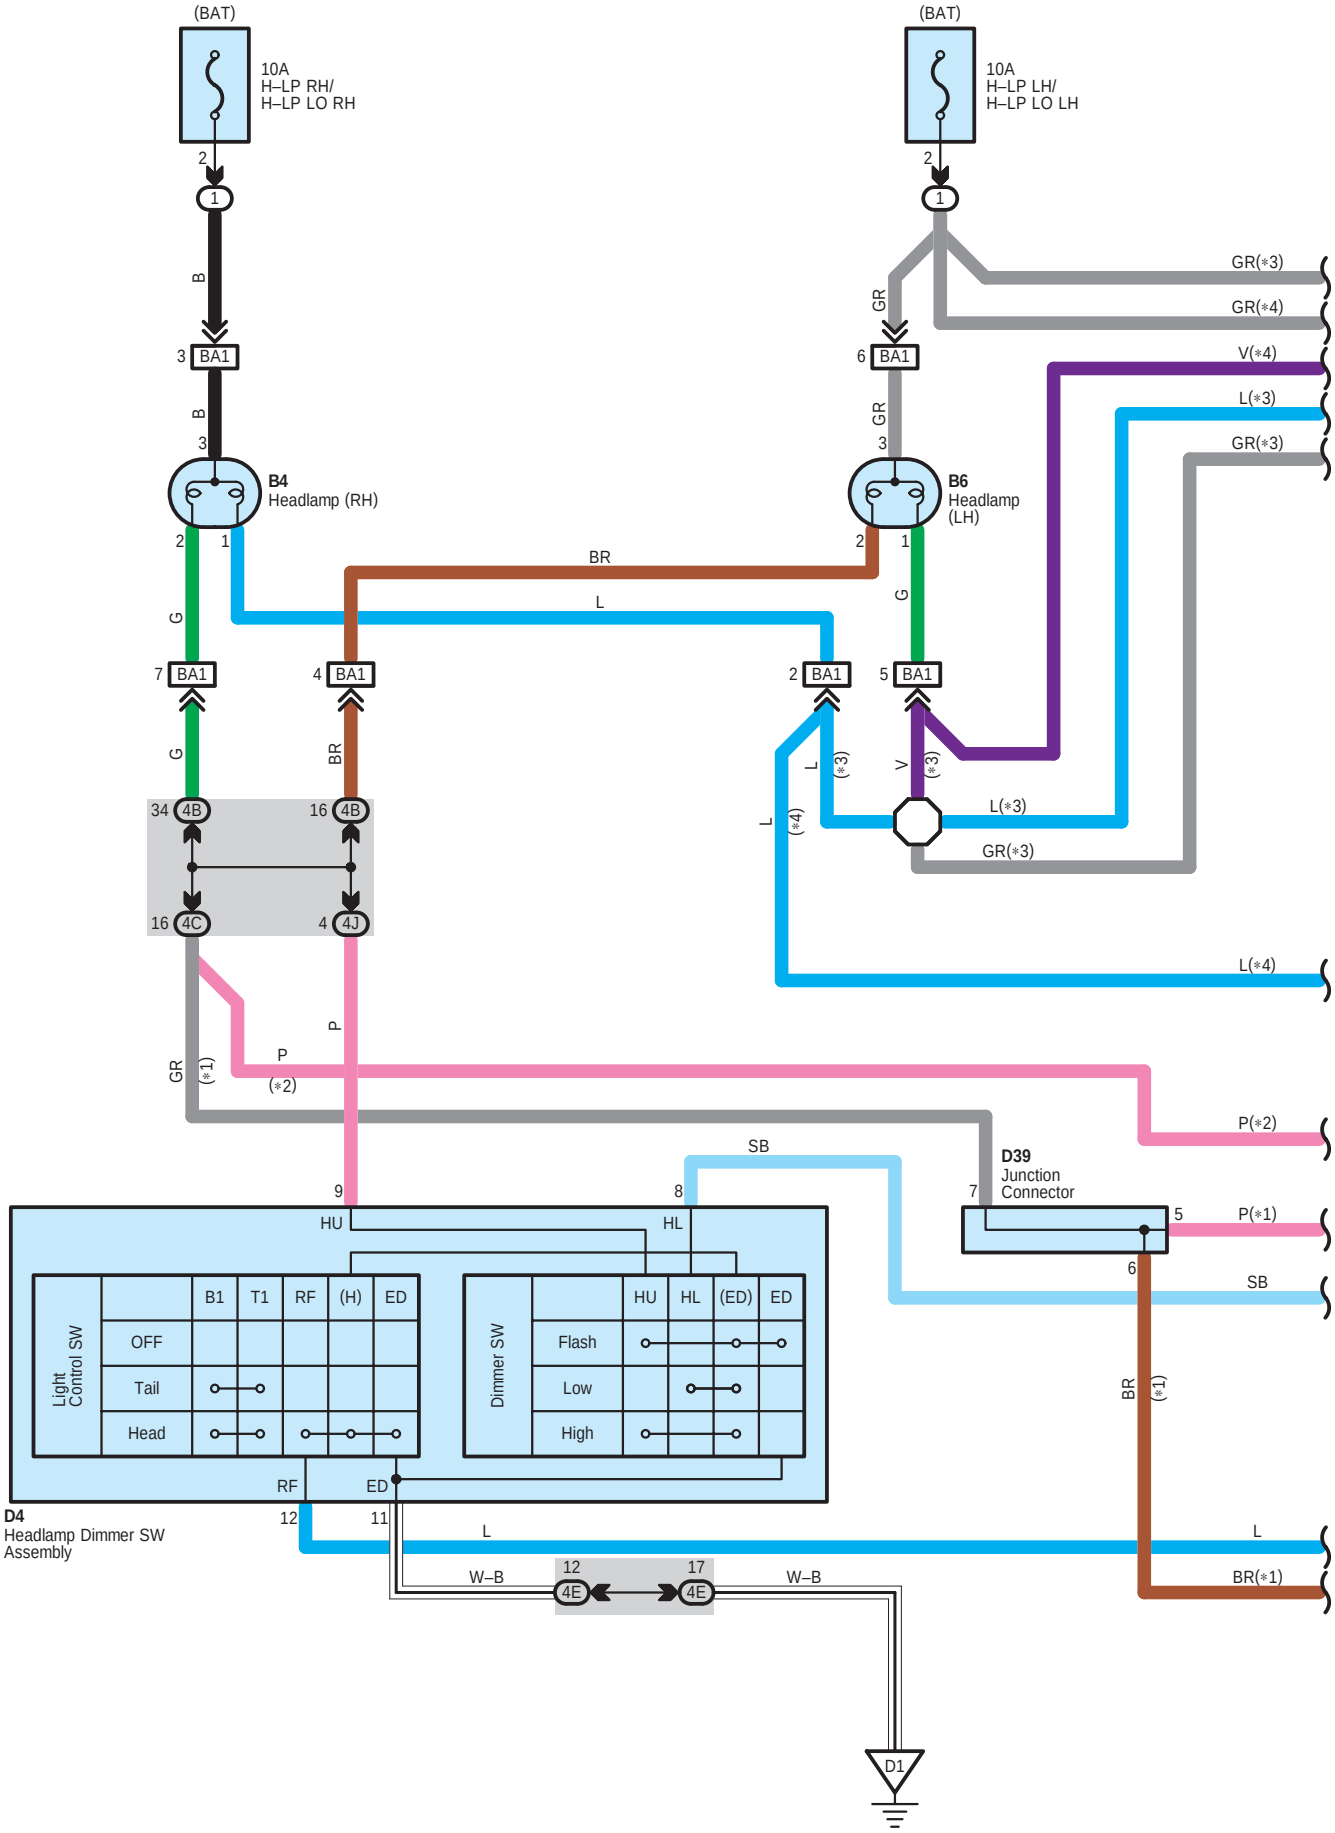
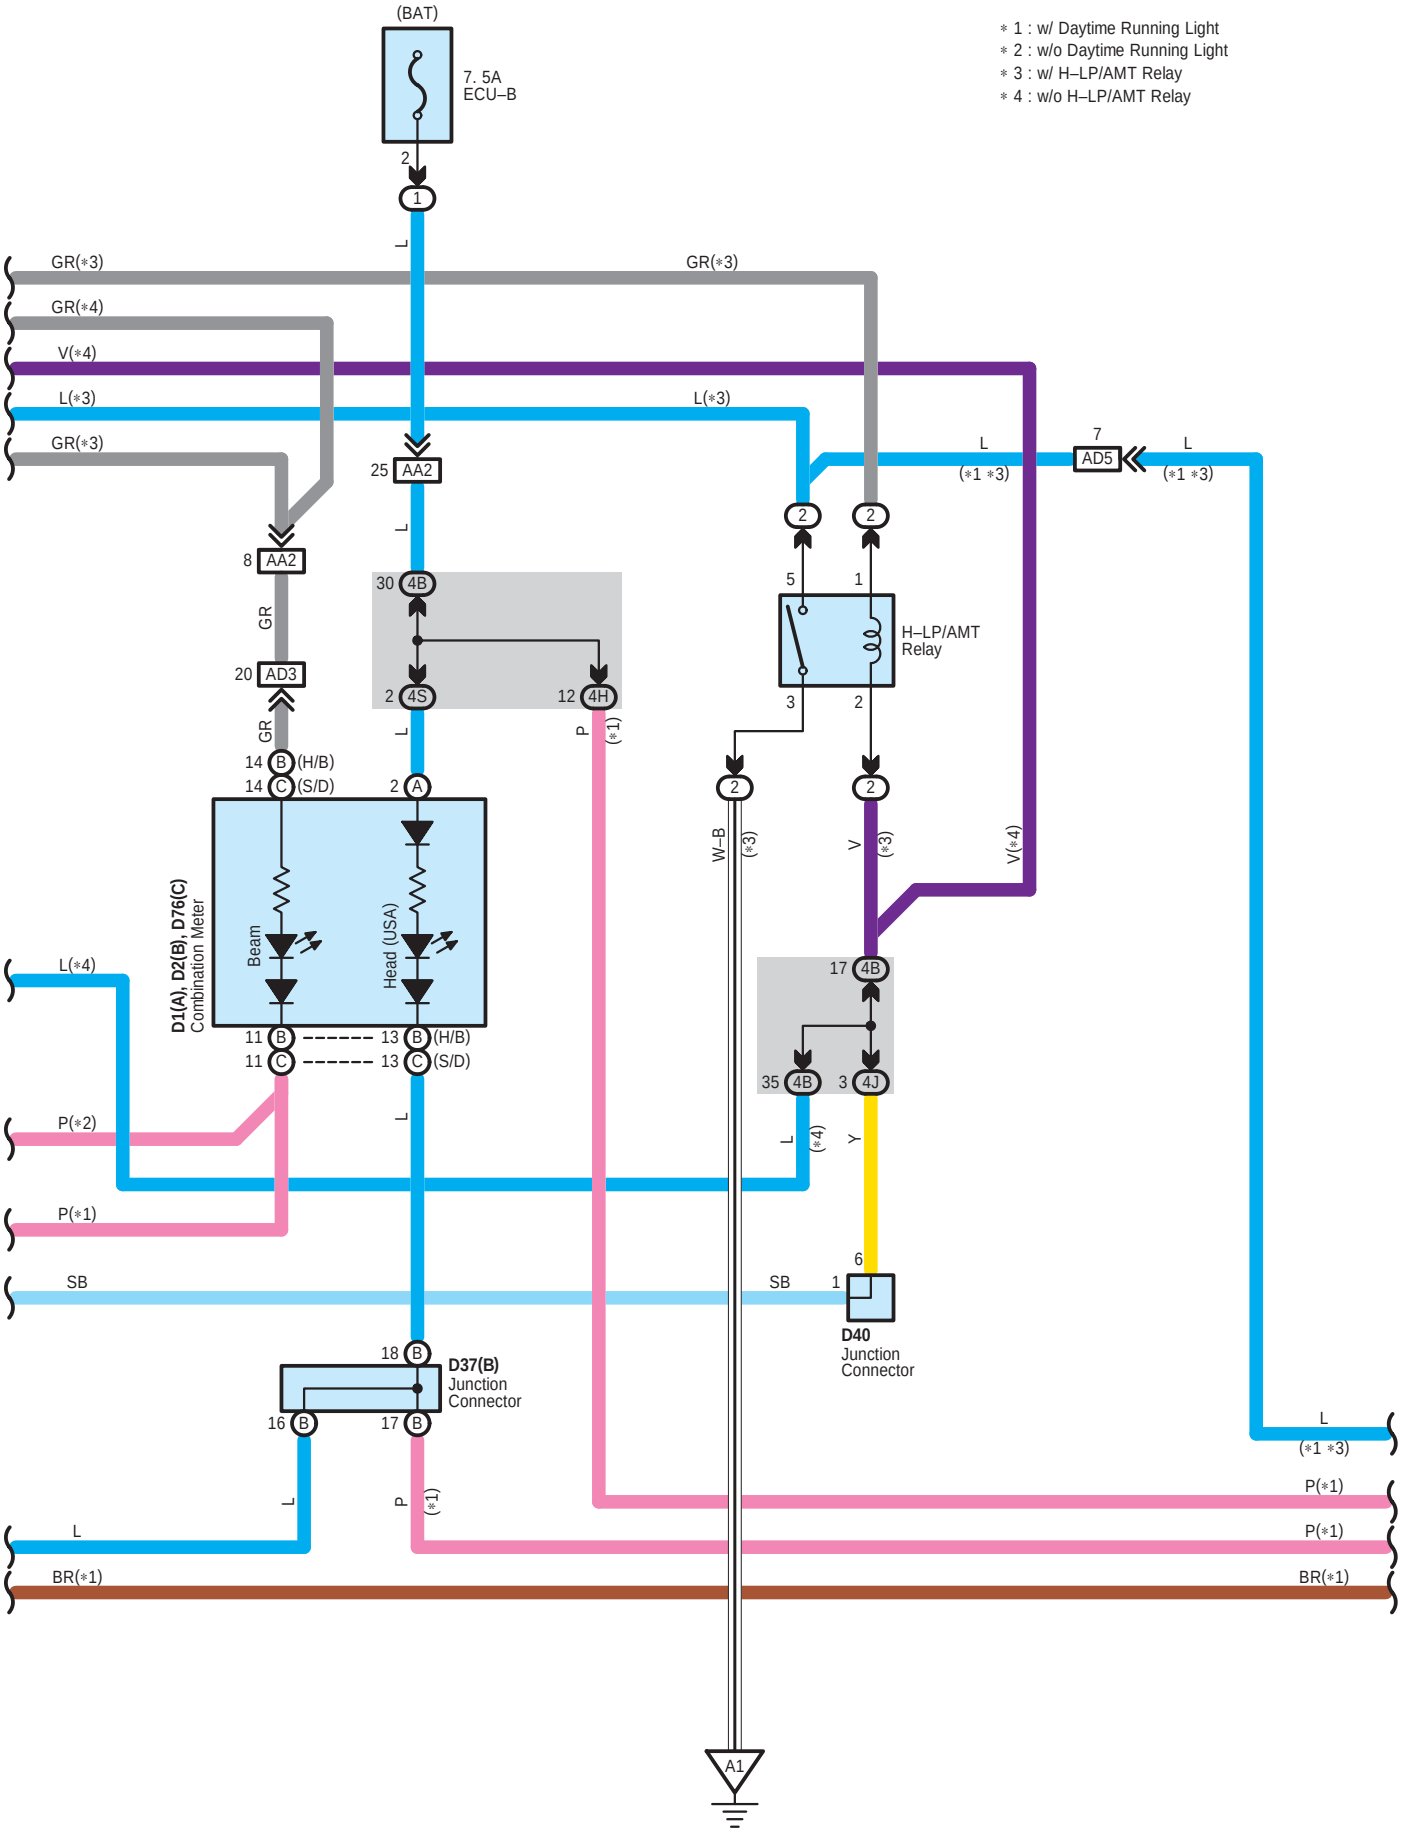
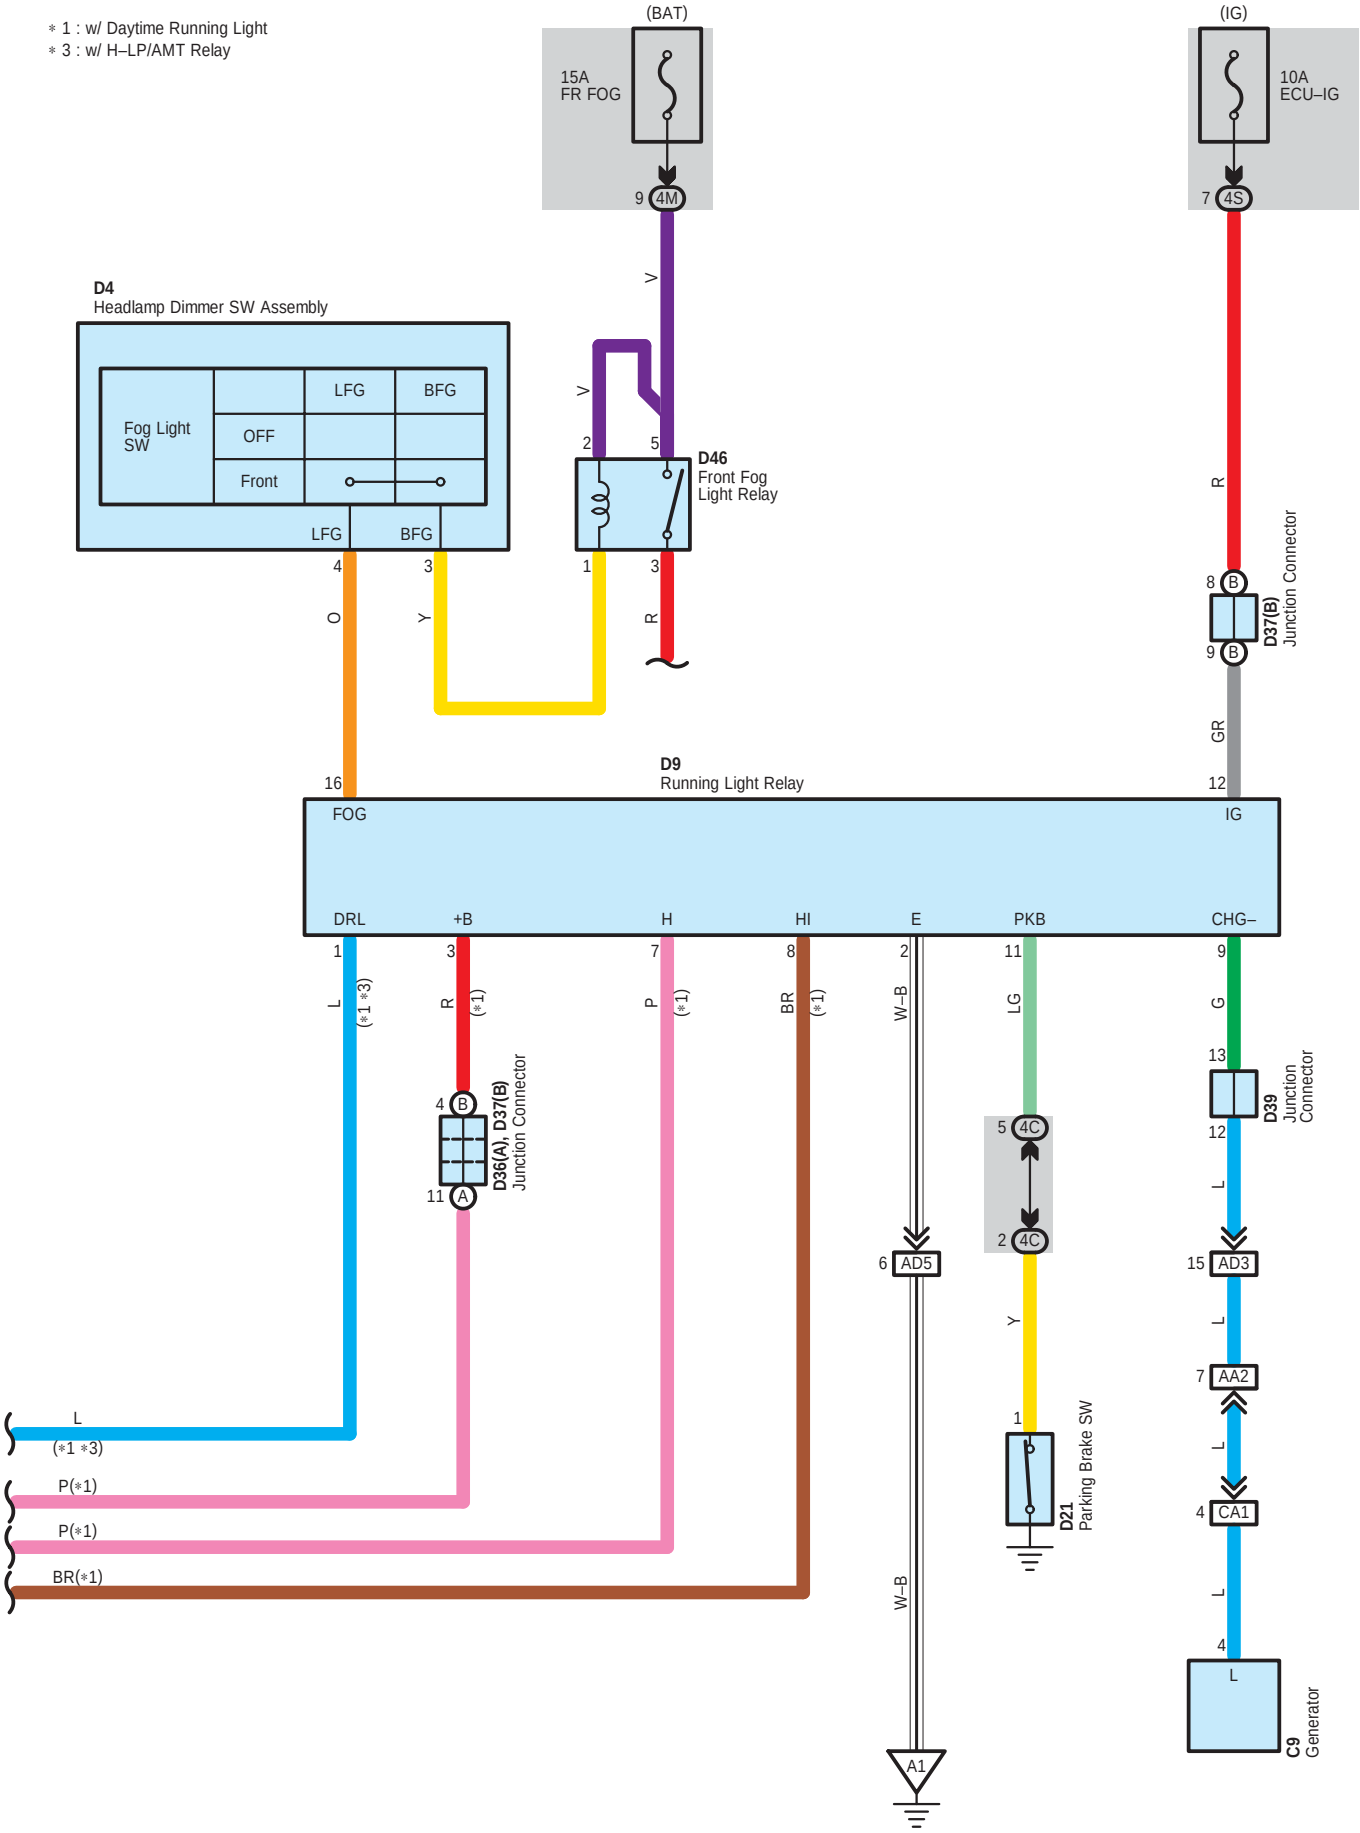

(BAT)
10A
H–LP RH/
H–LP LO RH
(BAT)
10A
H–LP LH/
H–LP LO LH
B4
Headlamp (RH)
B6
Headlamp
(LH)
BA1
4B
4C
4J
4E
GR(∗3)
GR(∗4)
V(∗4)
L(∗3)
GR(∗3)
BR
L
G
B
GR
P
V
L(∗4)
P(∗2)
SB
P(∗1)
BR(∗1)
D39
Junction
Connector
HU
HL
RF
ED
Light
Control SW
B1
T1
RF
(H)
ED
OFF
Tail
Head
Dimmer SW
HU
HL
(ED)
ED
Flash
Low
High
D4
Headlamp Dimmer SW
Assembly
W–B
D1


∗ 1 : w/ Daytime Running Light
∗ 2 : w/o Daytime Running Light
∗ 3 : w/ H–LP/AMT Relay
∗ 4 : w/o H–LP/AMT Relay
(BAT)
7. 5A
ECU–B
H–LP/AMT
Relay
D1(A), D2(B), D76(C)
Combination Meter
Beam
Head (USA)
D37(B)
Junction
Connector
D40
Junction
Connector
A1


∗ 1 : w/ Daytime Running Light
∗ 3 : w/ H–LP/AMT Relay
(BAT)
15A
FR FOG
9 4M
(IG)
10A
ECU–IG
7 4S
D4
Headlamp Dimmer SW Assembly
Fog Light SW
OFF
Front
LFG
BFG
D46
Front Fog Light Relay
D9
Running Light Relay
FOG
IG
DRL
+B
H
HI
E
PKB
CHG–
D36(A), D37(B) Junction Connector
D37(B) Junction Connector
D39 Junction Connector
D21 Parking Brake SW
C9 Generator
AD5
AD3
AA2
CA1
A1
L
(∗1 ∗3)
P(∗1)
P(∗1)
BR(∗1)

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B4	46 (H/B)	D4	51 (H/B)	D37 B	53 (S/D)
	48 (S/D)		53 (S/D)	D39	51 (H/B)
B6	46 (H/B)	D9	51 (H/B)		53 (S/D)
	48 (S/D)		53 (S/D)	D40	51 (H/B)
C9	47 (H/B)	D21	51 (H/B)		53 (S/D)
	49 (S/D)		53 (S/D)	D46	51 (H/B)
D1 A	51 (H/B)	D36 A	51 (H/B)		53 (S/D)
	53 (S/D)		53 (S/D)	D76 C	53 (S/D)
D2 B	51 (H/B)	D37 B	51 (H/B)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B (Engine Compartment Left)
2	28	Engine Room R/B No.2 (Engine Compartment Right)

: Junction Block and Wire Harness Connector

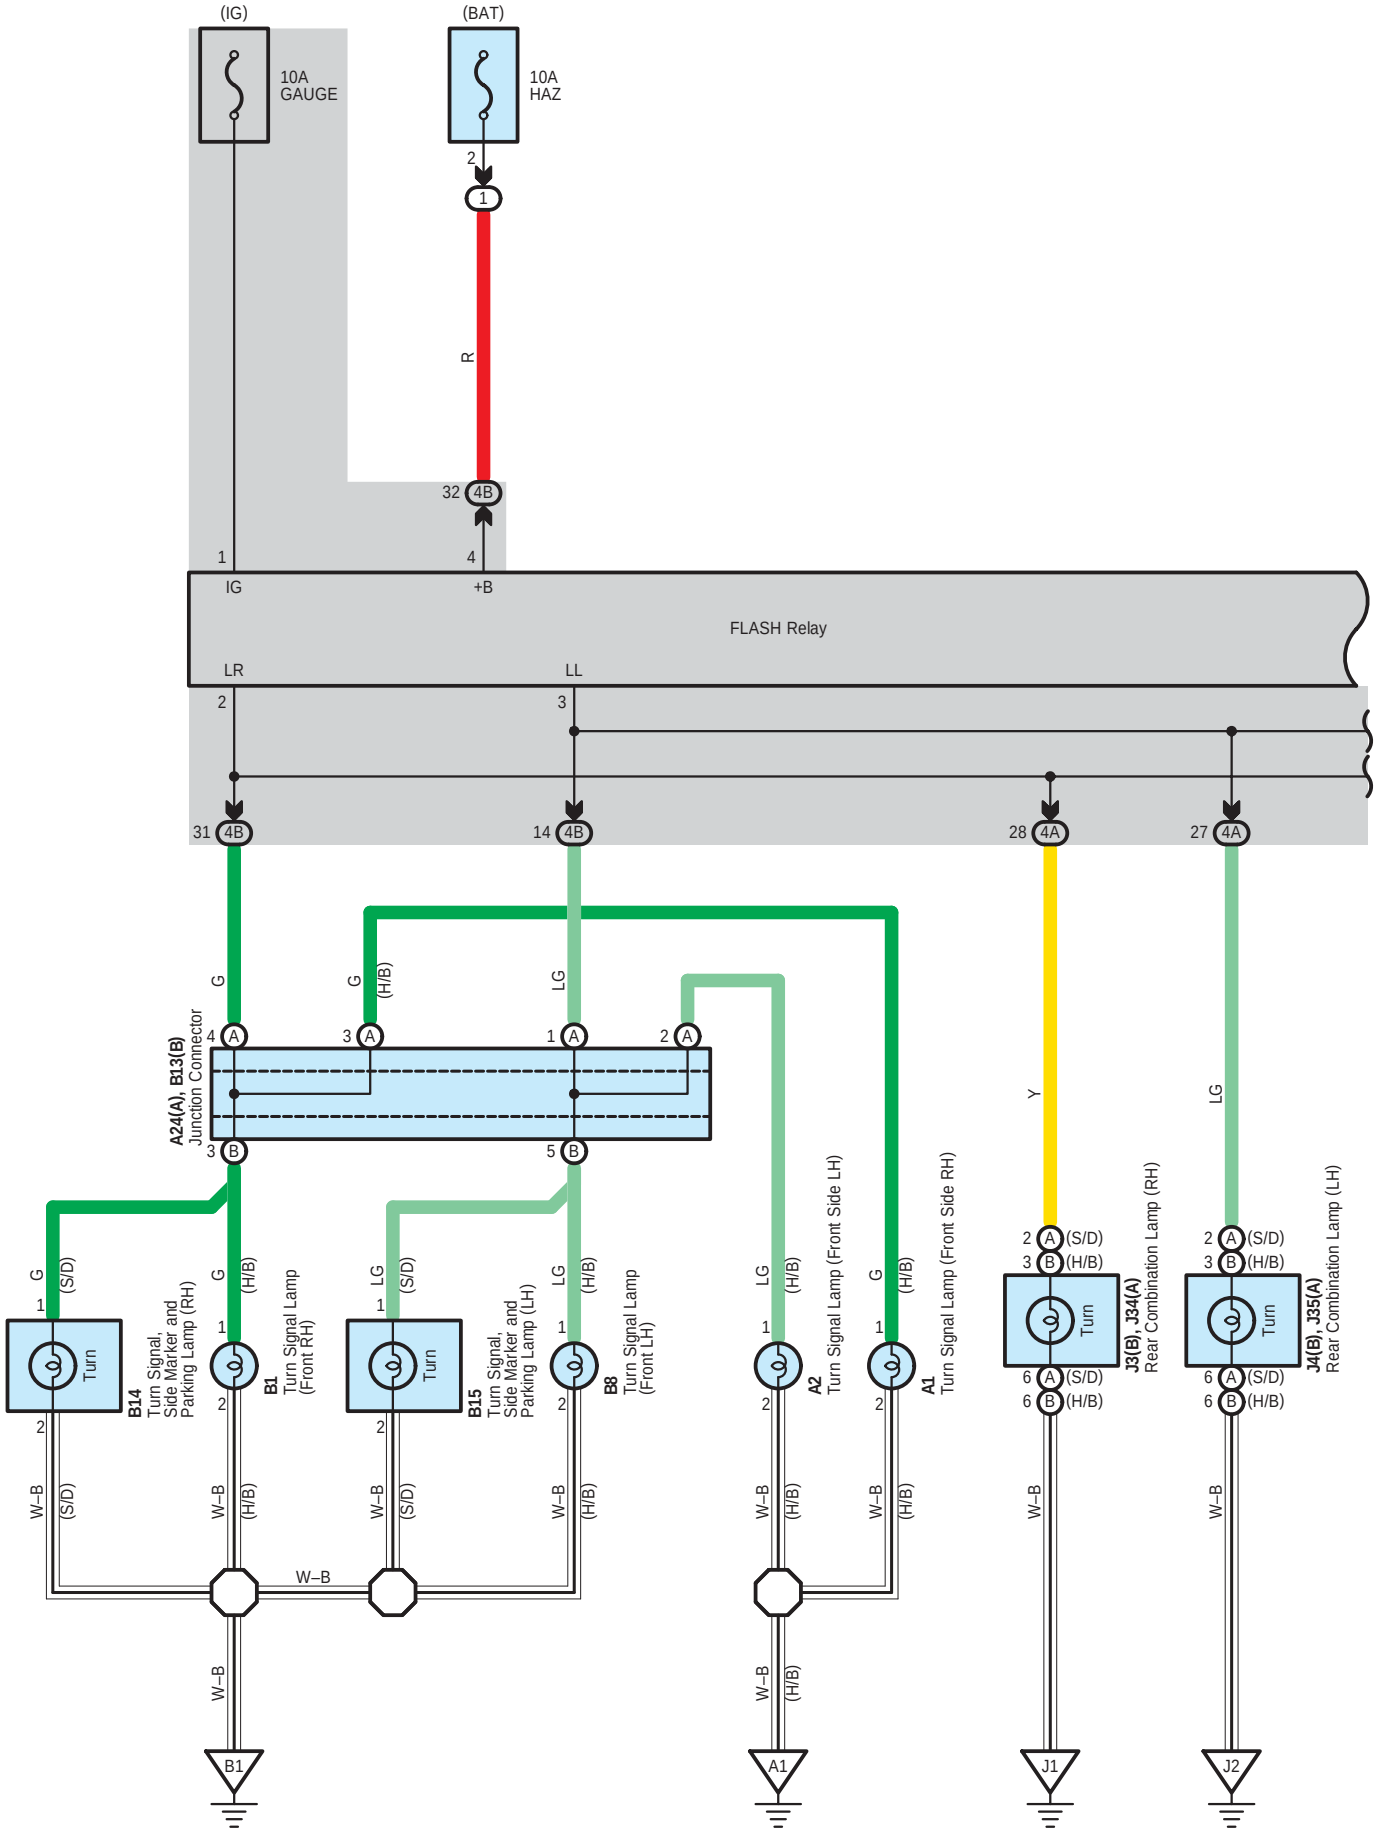
Code	See Page	Junction Block and Wire Harness (Connector Location)
4B	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
4C	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
4E		
4H		
4J		
4M	31	
4S		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AA2	62 (H/B)	Engine Room Main Wire and Engine Room Main Wire (Instrument Panel Left)
	63 (S/D)	
AD3	62 (H/B)	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Left)
	63 (S/D)	
AD5	62 (H/B)	
	63 (S/D)	
BA1	60 (H/B)	Engine Room No.2 Wire and Engine Room Main Wire (Engine Compartment Left)
	61 (S/D)	
CA1	60 (H/B)	Engine Wire and Engine Room Main Wire (Engine Compartment Left)
	61 (S/D)	

: Ground Points

Code	See Page	Ground Points Location
A1	60 (H/B)	Left Suspension Tower
	61 (S/D)	
D1	62 (H/B)	Left Kick Panel
	63 (S/D)	


(IG)
(BAT)
10A
GAUGE
10A
HAZ
2
1
R
32 4B
1
4
IG
+B
FLASH Relay
LR
LL
2
3
31 4B
14 4B
28 4A
27 4A
G
G
(H/B)
LG
4 A
3 A
1 A
2 A
A24(A), B13(B)
Junction Connector
3 B
5 B
Y
LG
G (S/D)
1
Turn
2
W–B
(S/D)
B14
Turn Signal,
Side Marker and
Parking Lamp (RH)
G (H/B)
1
2
W–B
(H/B)
B1
Turn Signal Lamp
(Front RH)
LG (S/D)
1
Turn
2
W–B
(S/D)
B15
Turn Signal,
Side Marker and
Parking Lamp (LH)
LG (H/B)
1
2
W–B
(H/B)
B8
Turn Signal Lamp
(Front LH)
W–B
W–B
B1
LG (H/B)
1
2
W–B
(H/B)
A2
Turn Signal Lamp (Front Side LH)
G (H/B)
1
2
W–B
(H/B)
A1
Turn Signal Lamp (Front Side RH)
W–B
(H/B)
A1
2 A (S/D)
3 B (H/B)
Turn
6 A (S/D)
6 B (H/B)
J3(B), J34(A)
Rear Combination Lamp (RH)
W–B
J1
2 A (S/D)
3 B (H/B)
Turn
6 A (S/D)
6 B (H/B)
J4(B), J35(A)
Rear Combination Lamp (LH)
W–B
J2