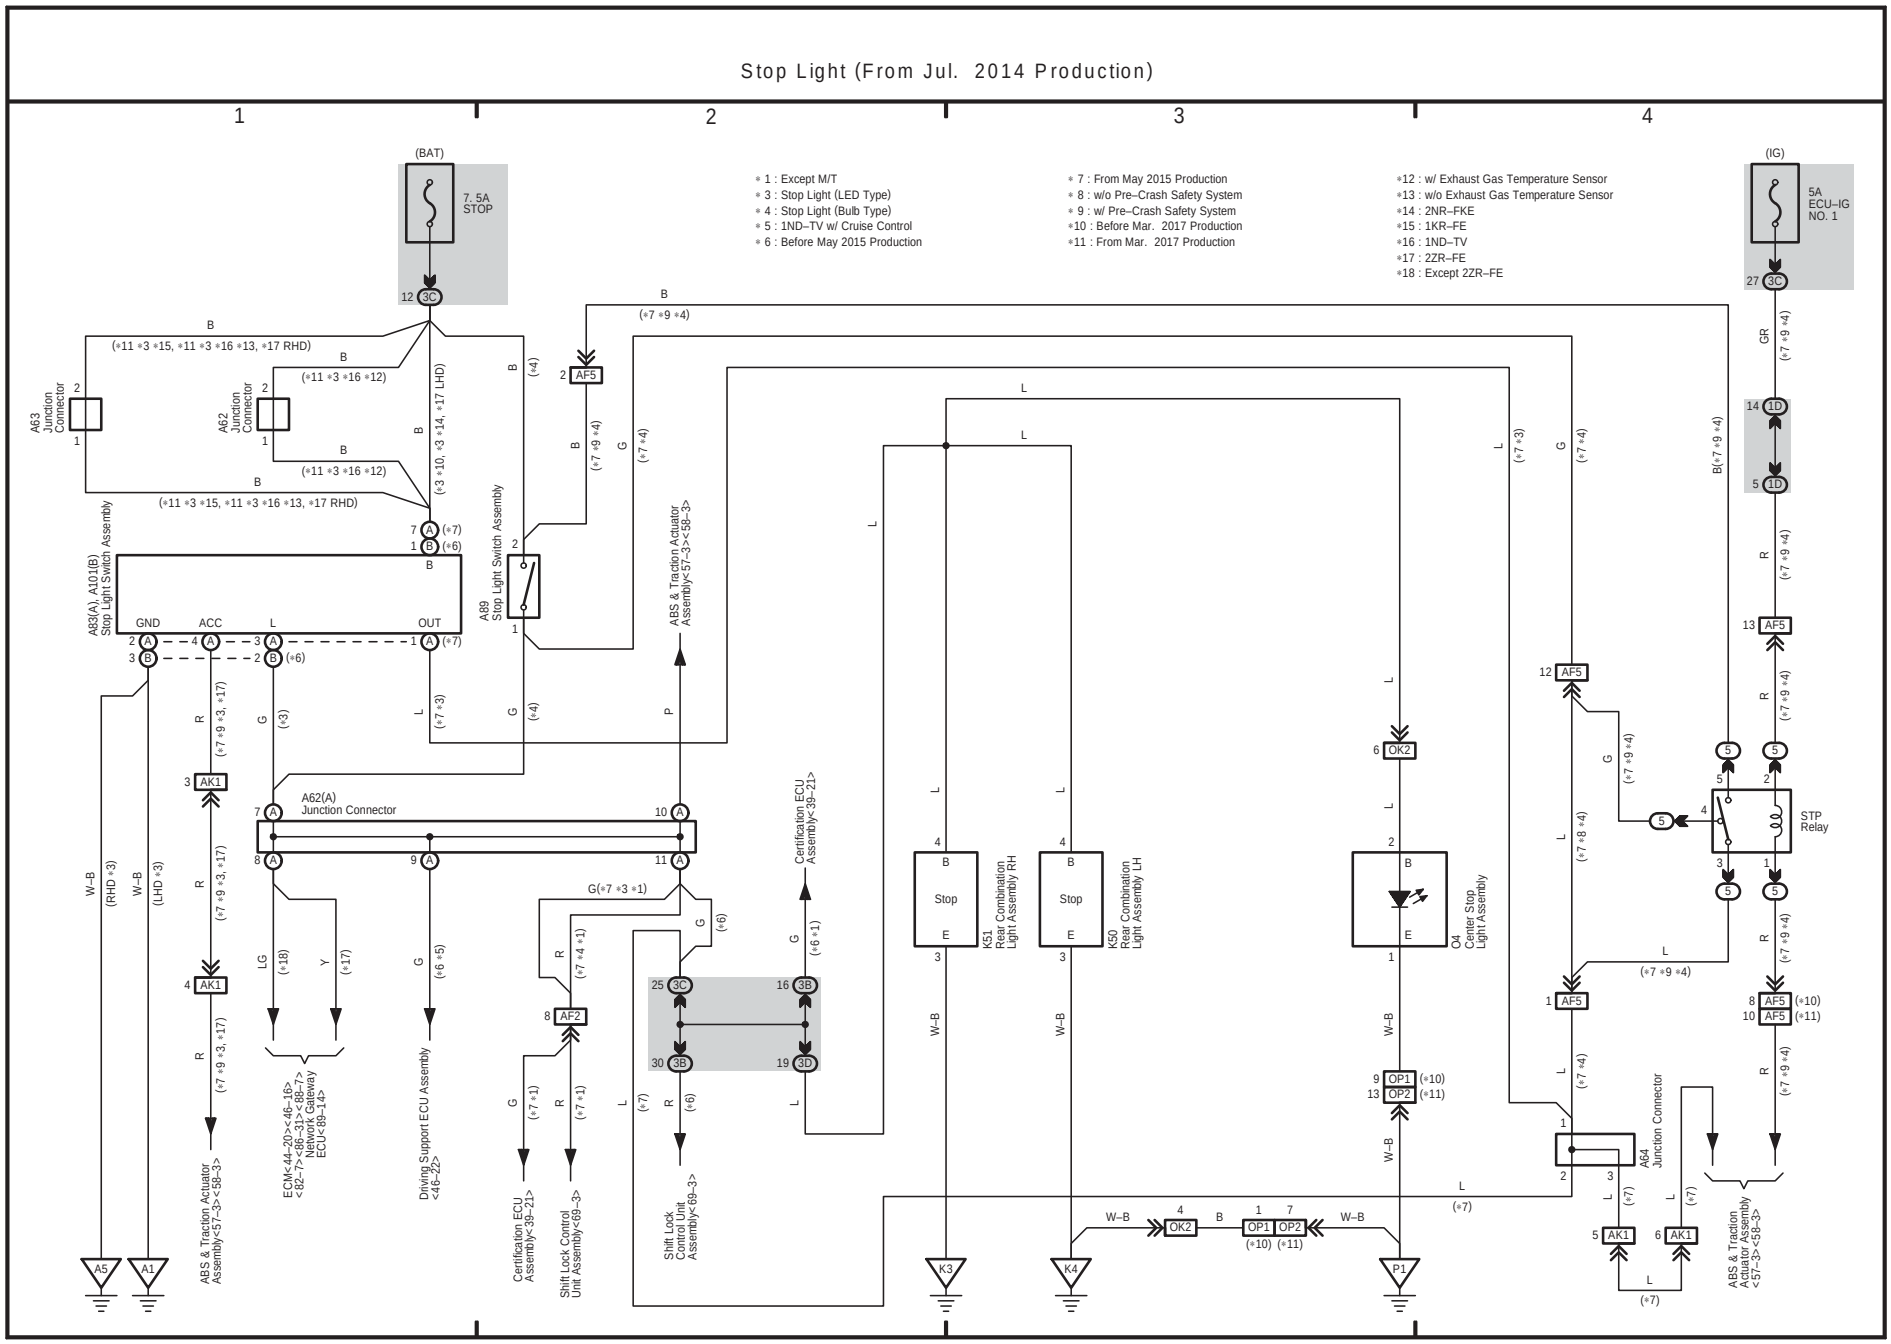

Stop Light (From Jul. 2014 Production)
1
2
3
4
(BAT)
7.5A STOP
(IG)
5A ECU–IG NO. 1
∗1 : Except M/T
∗3 : Stop Light (LED Type)
∗4 : Stop Light (Bulb Type)
∗5 : 1ND–TV w/ Cruise Control
∗6 : Before May 2015 Production
∗7 : From May 2015 Production
∗8 : w/o Pre–Crash Safety System
∗9 : w/ Pre–Crash Safety System
∗10 : Before Mar. 2017 Production
∗11 : From Mar. 2017 Production
∗12 : w/ Exhaust Gas Temperature Sensor
∗13 : w/o Exhaust Gas Temperature Sensor
∗14 : 2NR–FKE
∗15 : 1KR–FE
∗16 : 1ND–TV
∗17 : 2ZR–FE
∗18 : Except 2ZR–FE
A63 Junction Connector
A62 Junction Connector
A83(A), A101(B) Stop Light Switch Assembly
GND
ACC
L
OUT
A89 Stop Light Switch Assembly
ABS & Traction Actuator Assembly<57–3><58–3>
A62(A) Junction Connector
Certification ECU Assembly<39–21>
K51 Rear Combination Light Assembly RH
K50 Rear Combination Light Assembly LH
O4 Center Stop Light Assembly
STP Relay
A64 Junction Connector
ECM<44–20><46–16><82–7><86–31><88–7><88–14>
Driving Support ECU Assembly <46–22>
Shift Lock Control Unit Assembly<69–3>
A5
A1
K3
K4
P1