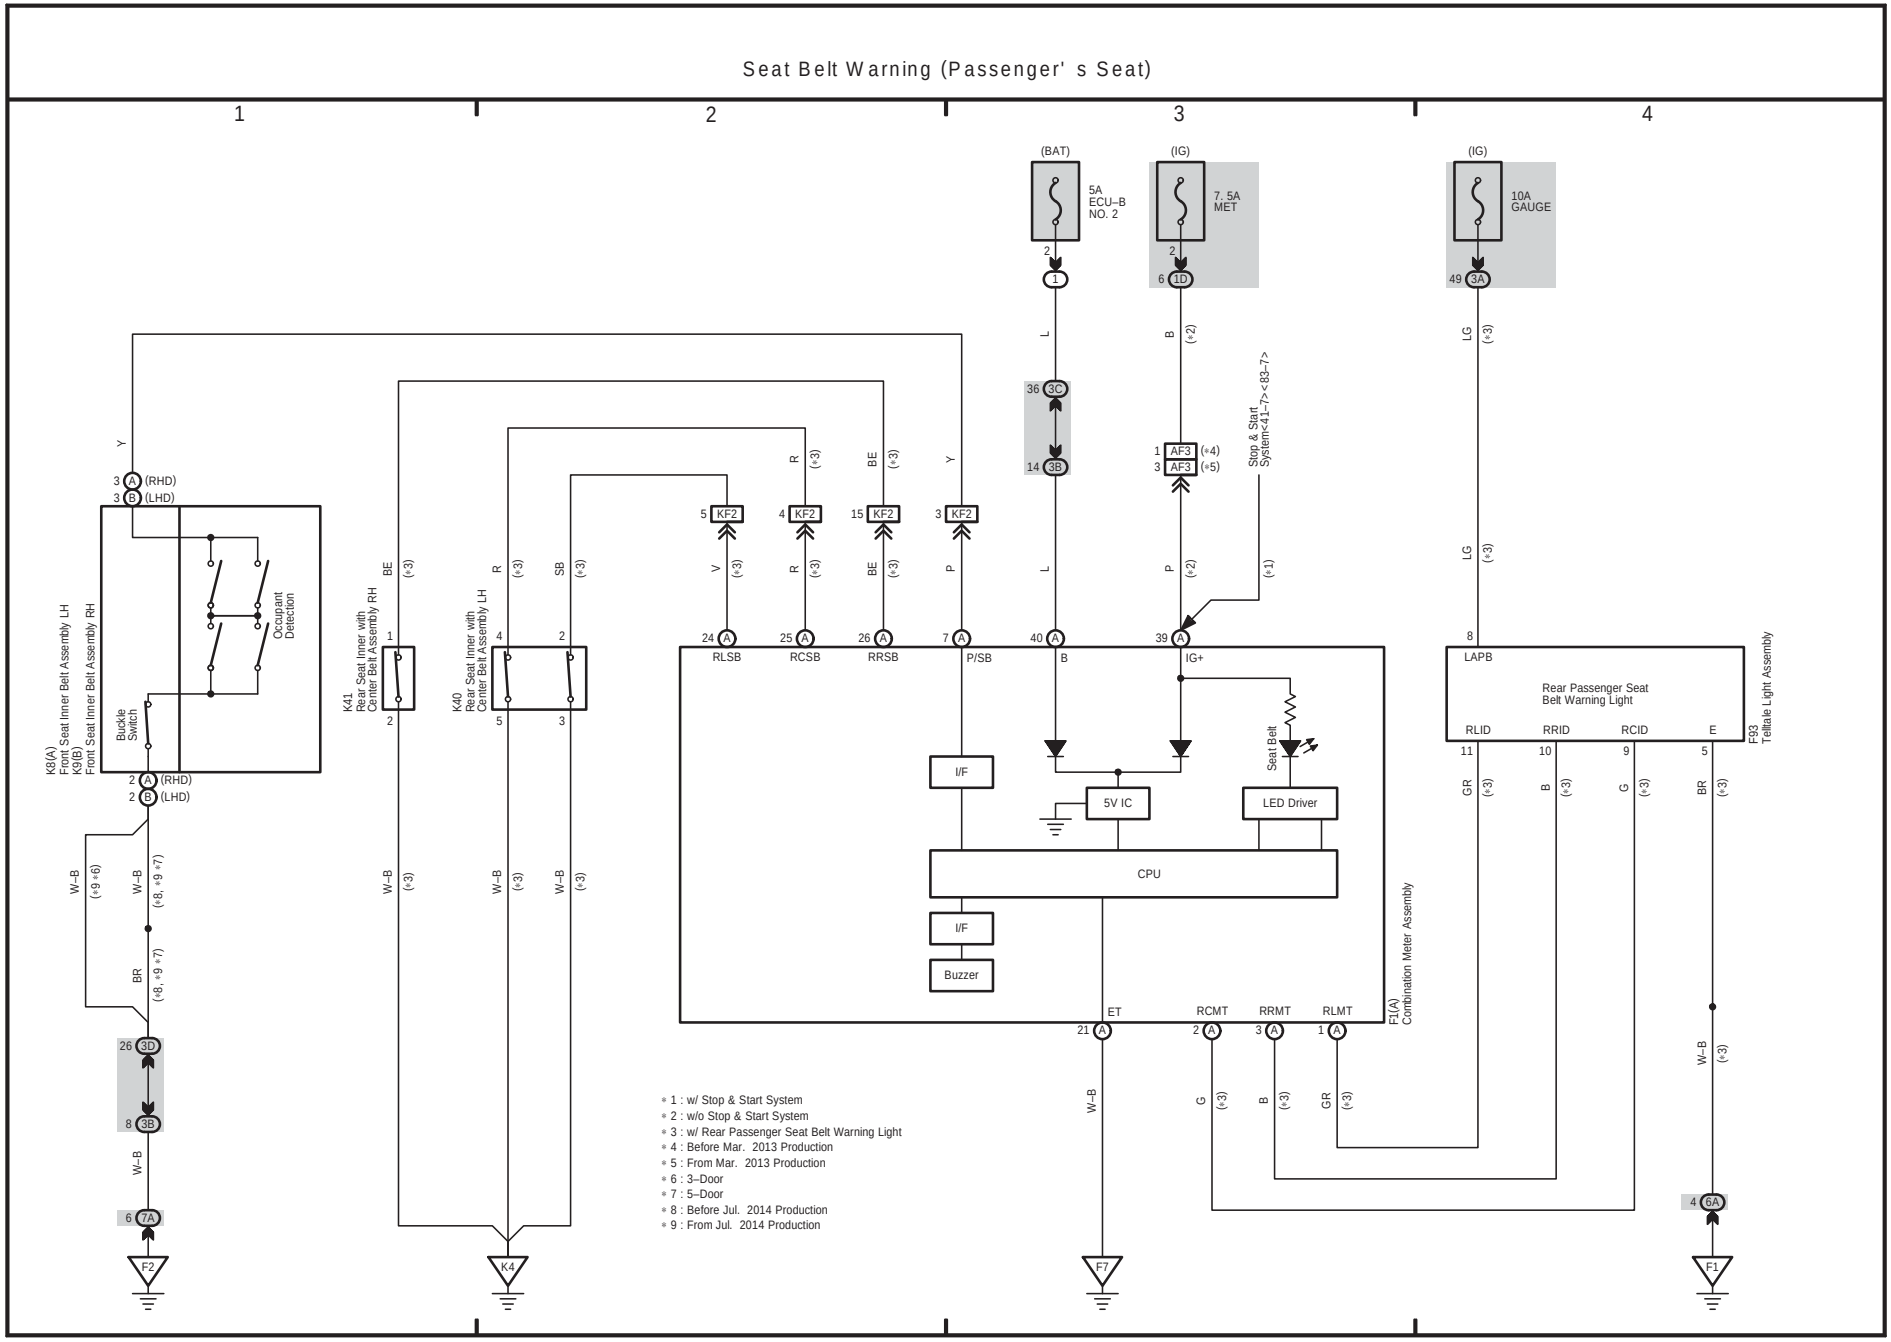

Seat Belt Warning (Passenger' s Seat)
1
2
3
4
(BAT)
(IG)
(IG)
5A ECU–B NO. 2
7. 5A MET
10A GAUGE
Stop & Start System<41–7><83–7>
K8(A) Front Seat Inner Belt Assembly LH
K9(B) Front Seat Inner Belt Assembly RH
Buckle Switch
Occupant Detection
K41 Rear Seat Inner with Center Belt Assembly RH
K40 Rear Seat Inner with Center Belt Assembly LH
RLSB
RCSB
RRSB
P/SB
B
IG+
I/F
5V IC
LED Driver
Seat Belt
CPU
I/F
Buzzer
F1(A) Combination Meter Assembly
ET
RCMT
RRMT
RLMT
LAPB
Rear Passenger Seat Belt Warning Light
RLID
RRID
RCID
E
F93 Telltale Light Assembly
F2
K4
F7
F1
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
* 3 : w/ Rear Passenger Seat Belt Warning Light
* 4 : Before Mar. 2013 Production
* 5 : From Mar. 2013 Production
* 6 : 3–Door
* 7 : 5–Door
* 8 : Before Jul. 2014 Production
* 9 : From Jul. 2014 Production