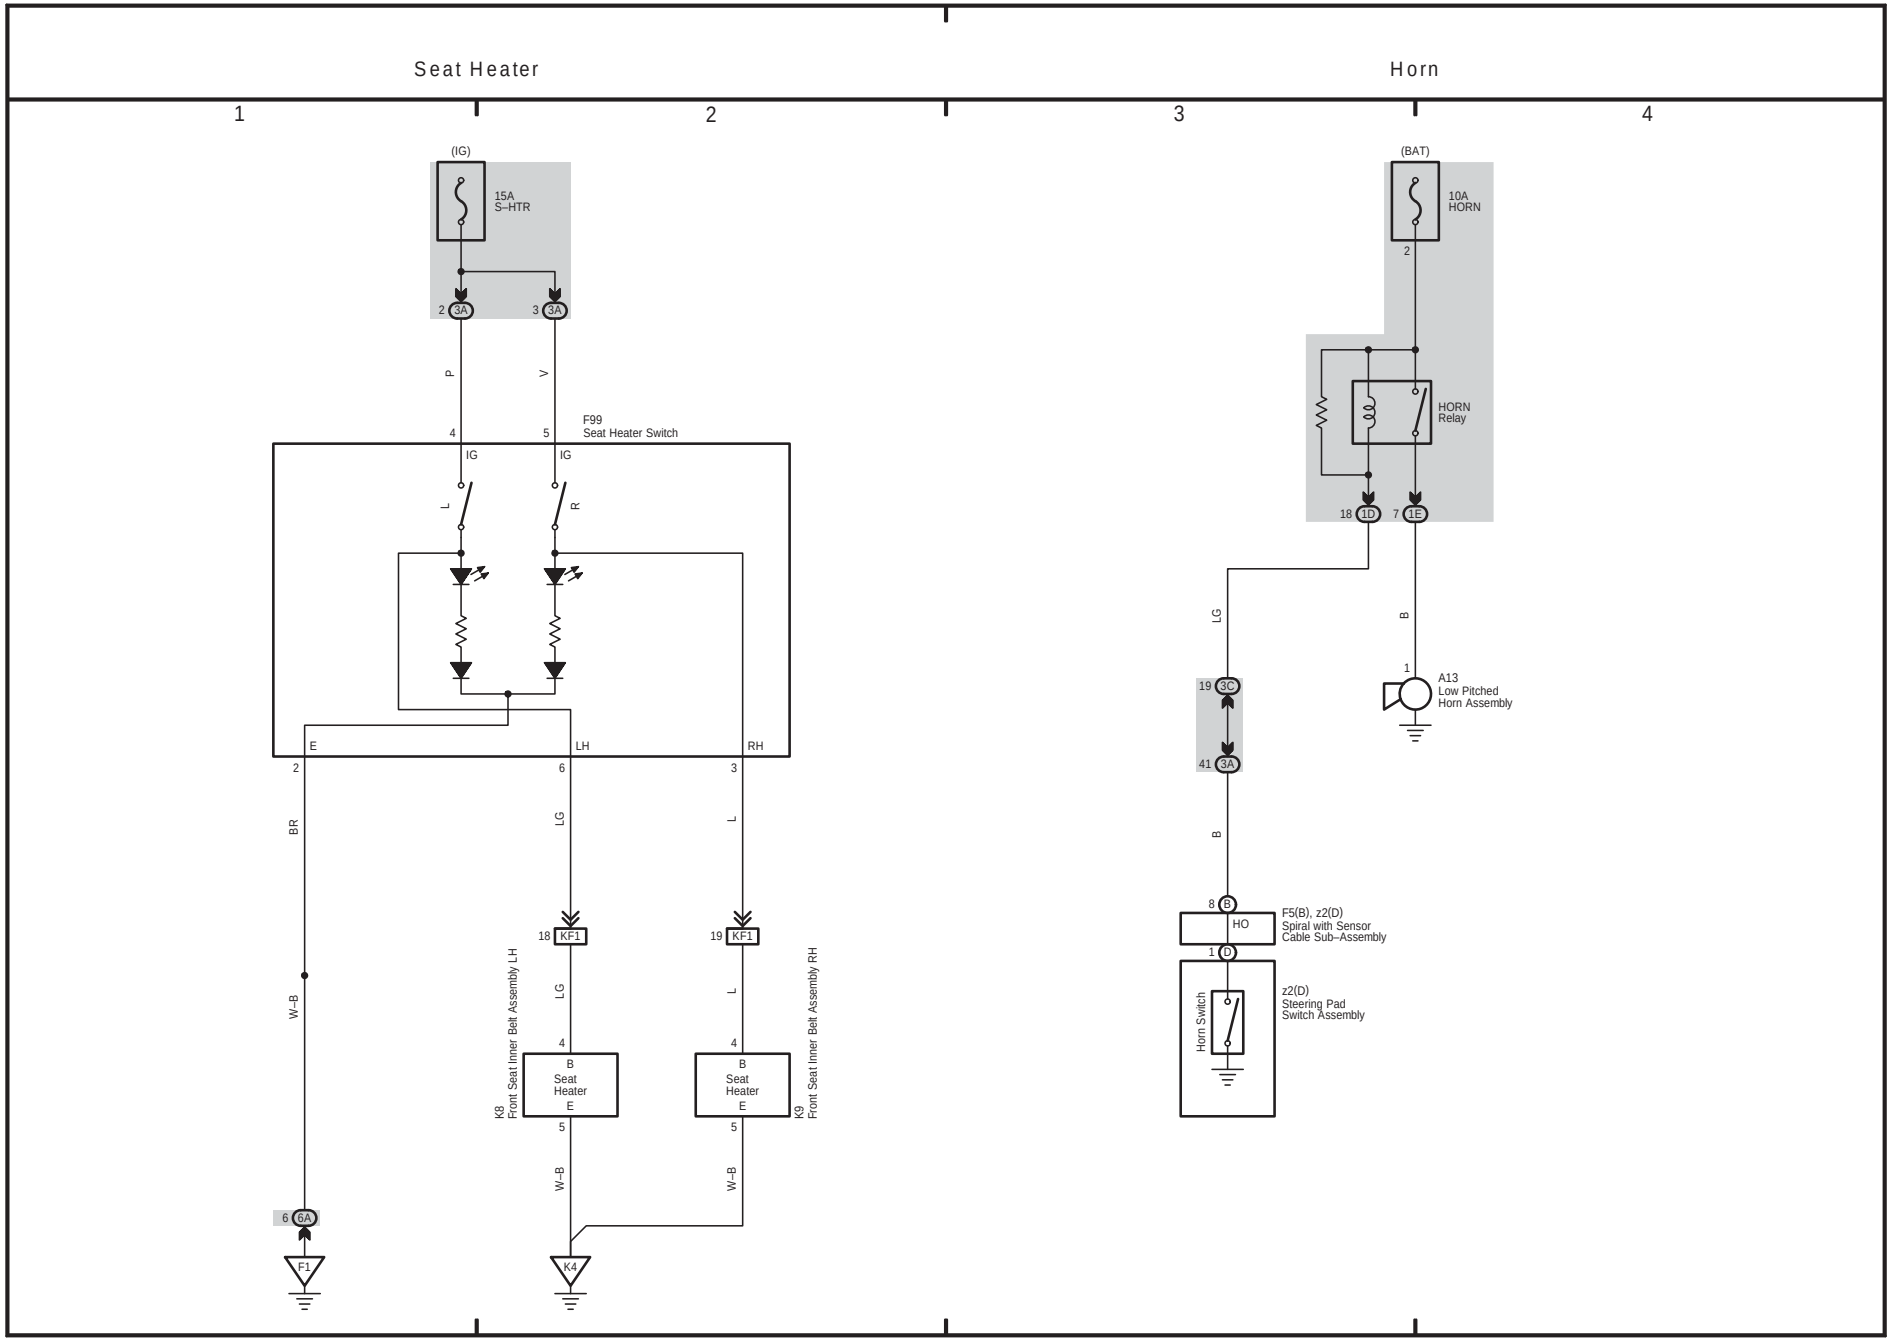

Seat Heater
Horn
1
2
3
4
(IG)
15A
S–HTR
2 3A
3 3A
P
V
4
5
F99
Seat Heater Switch
IG
IG
L
R
E
LH
RH
2
6
3
BR
LG
L
W–B
18 KF1
19 KF1
LG
L
4
B
Seat
Heater
E
5
W–B
W–B
K8
Front Seat Inner Belt Assembly LH
K9
Front Seat Inner Belt Assembly RH
6 6A
F1
K4
(BAT)
10A
HORN
2
HORN
Relay
18 1D
7 1E
LG
B
1
A13
Low Pitched
Horn Assembly
19 3C
41 3A
B
8 B
HO
F5(B), z2(D)
Spiral with Sensor
Cable Sub–Assembly
1 D
Horn Switch
z2(D)
Steering Pad
Switch Assembly