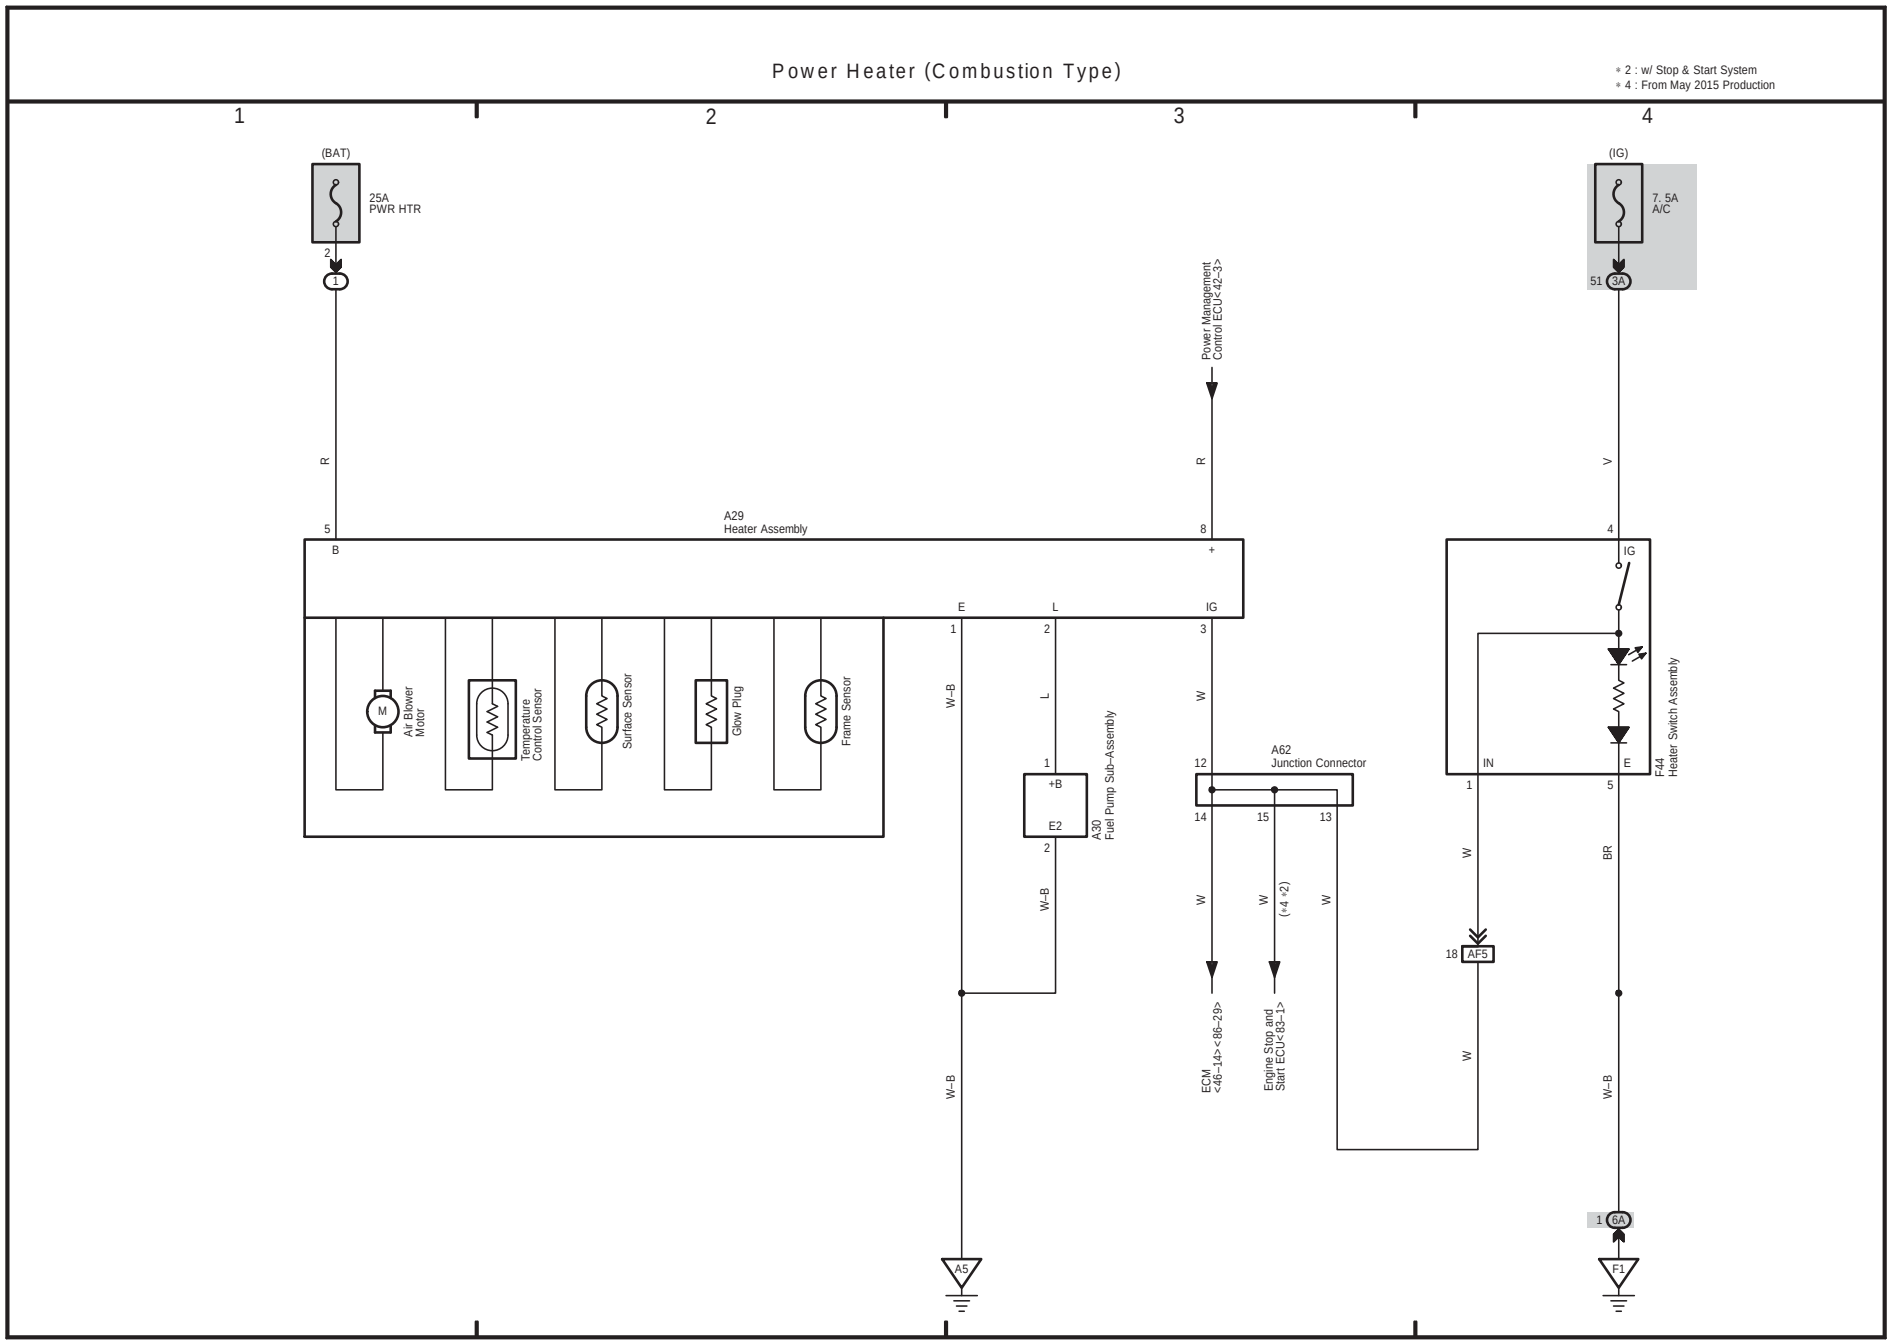

Power Heater (Combustion Type)
* 2 : w/ Stop & Start System
* 4 : From May 2015 Production
1
2
3
4
(BAT)
25A
PWR HTR
2
1
R
5
B
A29
Heater Assembly
E
L
IG
1
2
3
W–B
L
W
1
+B
E2
2
W–B
A30
Fuel Pump Sub-Assembly
Air Blower
Motor
Temperature
Control Sensor
Surface Sensor
Glow Plug
Frame Sensor
M
W–B
A5
Power Management
Control ECU<42–3>
R
8
+
W
12
A62
Junction Connector
14
15
13
W
W
(*4 *2)
W
ECM
<46–14><86–29>
Engine Stop and
Start ECU<83–1>
(IG)
7. 5A
A/C
51
3A
V
4
IG
IN
E
F44
Heater Switch Assembly
1
5
W
BR
18
AF5
W
W–B
1
6A
F1