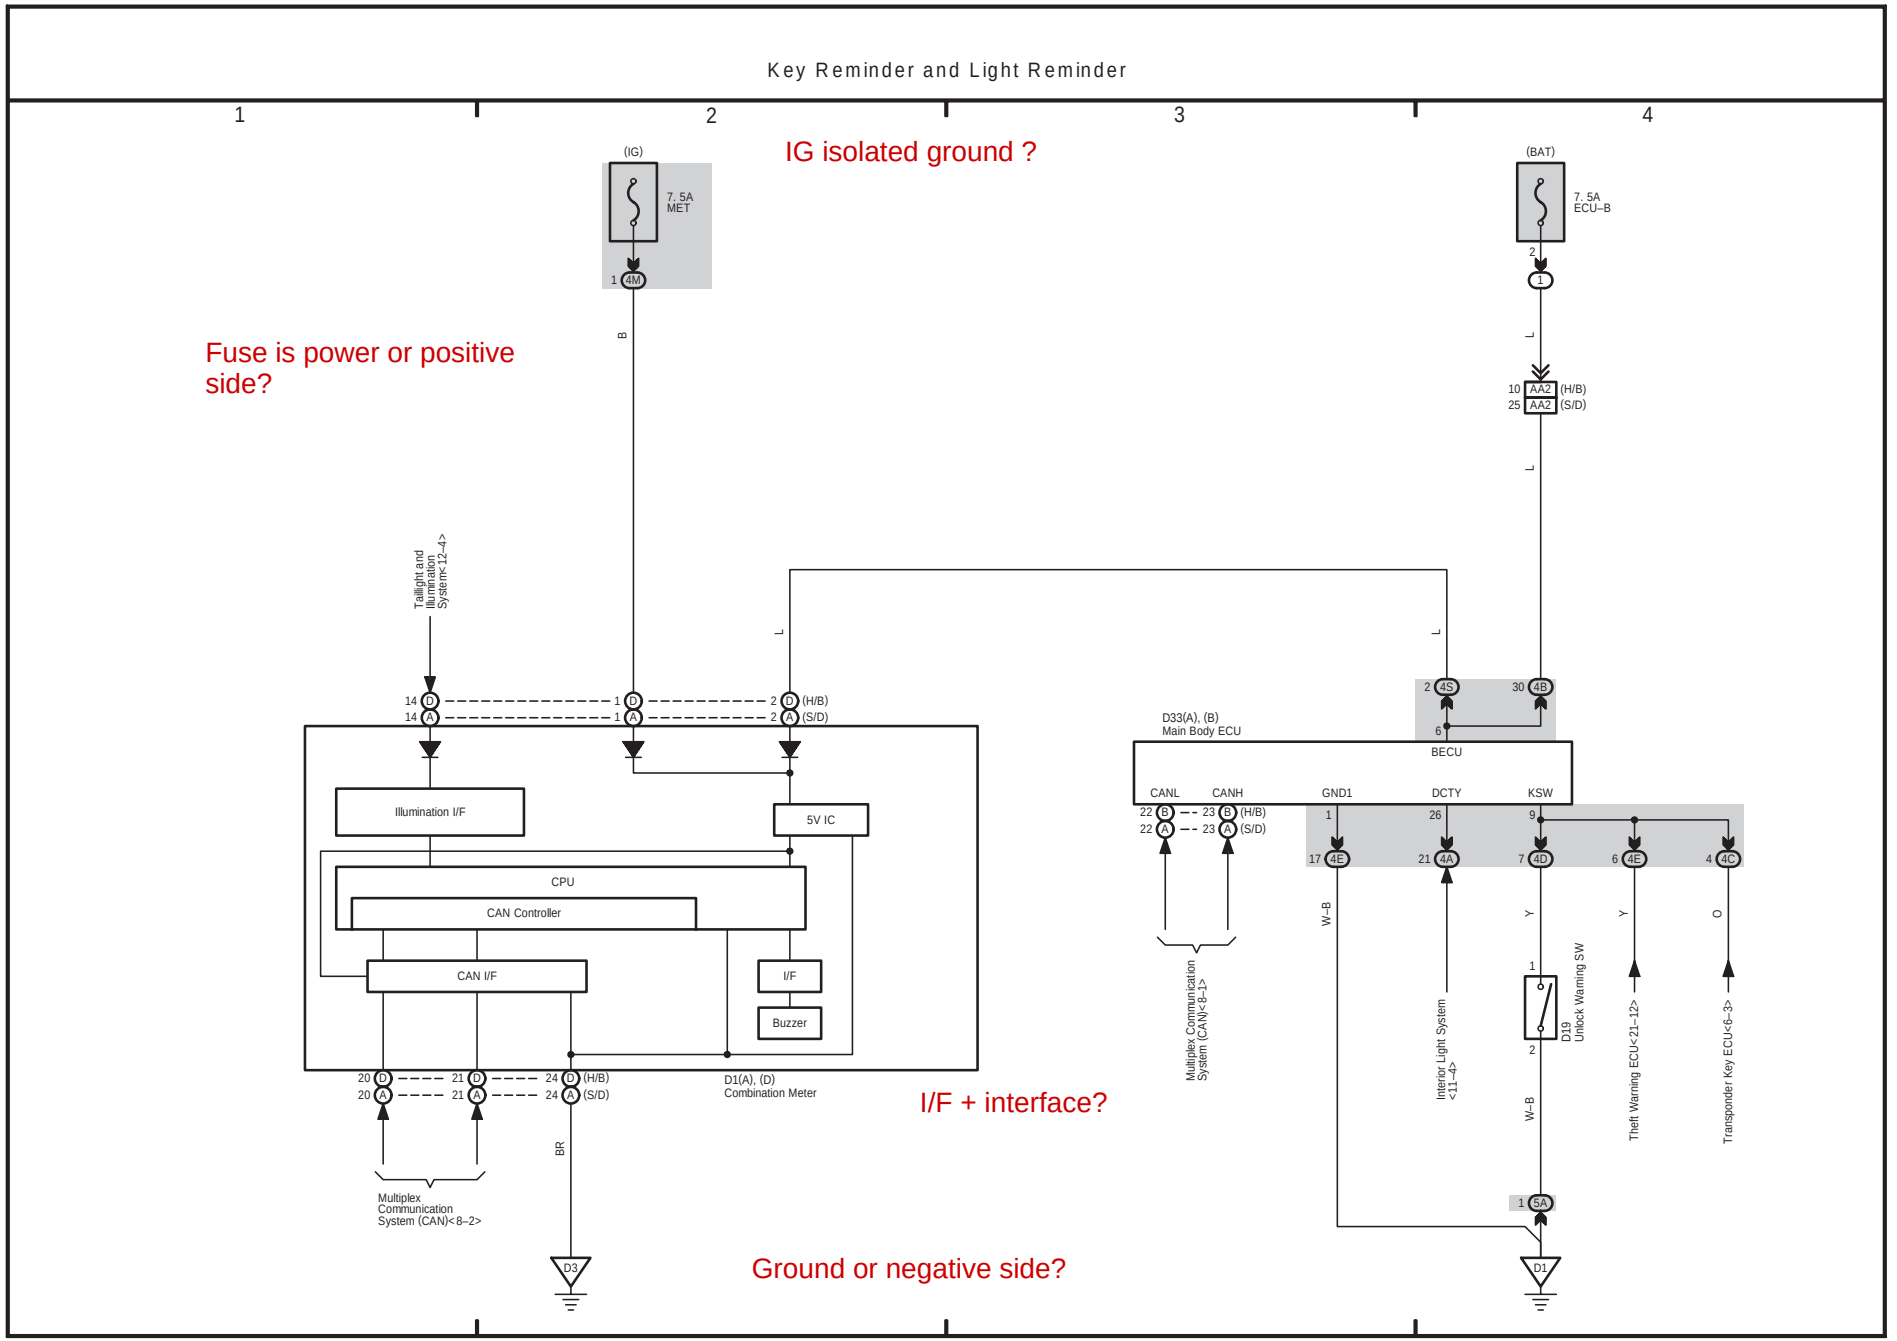

Key Reminder and Light Reminder
1
2
3
4
IG isolated ground ?
Fuse is power or positive side?
I/F + interface?
Ground or negative side?
(IG)
7. 5A MET
1 4M
B
(BAT)
7. 5A ECU–B
2
1
L
10 AA2 (H/B)
25 AA2 (S/D)
Taillight and Illumination System<12–4>
14 D
14 A
1 D
1 A
2 D (H/B)
2 A (S/D)
Illumination I/F
5V IC
CPU
CAN Controller
CAN I/F
I/F
Buzzer
20 D
20 A
21 D
21 A
24 D (H/B)
24 A (S/D)
D1(A), (D) Combination Meter
Multiplex Communication System (CAN)<8–2>
BR
D3
D33(A), (B) Main Body ECU
2 4S
30 4B
6
BECU
CANL
CANH
GND1
DCTY
KSW
22 B
22 A
23 B (H/B)
23 A (S/D)
1
26
9
17 4E
21 4A
7 4D
6 4E
4 4C
Multiplex Communication System (CAN)<6–1>
W–B
Y
O
Interior Light System <11–4>
1
2
D19 Unlock Warning SW
W–B
Theft Warning ECU<21–12>
Transponder Key ECU<6–3>
1 5A
D1