

AV


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE INSTRUMENT PANEL LOWER CENTER FINISH PANEL (See page ME-138)**
3. **REMOVE INSTRUMENT PANEL FINISH PANEL END RH (See page ME-138)**
4. **REMOVE INSTRUMENT PANEL FINISH PANEL END LH (See page ME-138)**
5. **REMOVE INSTRUMENT CLUSTER FINISH PANEL (See page ME-139)**
6. **REMOVE INSTRUMENT CLUSTER CENTER FINISH PANEL SUB-ASSEMBLY (except Integrated with Panel) (See page IP-43)**
7. **REMOVE RADIO RECEIVER ASSEMBLY**
   (a) for Integrated with Panel:
      (1) Disconnect the hazard warning signal switch connector.
      (2) Remove the 4 bolts.

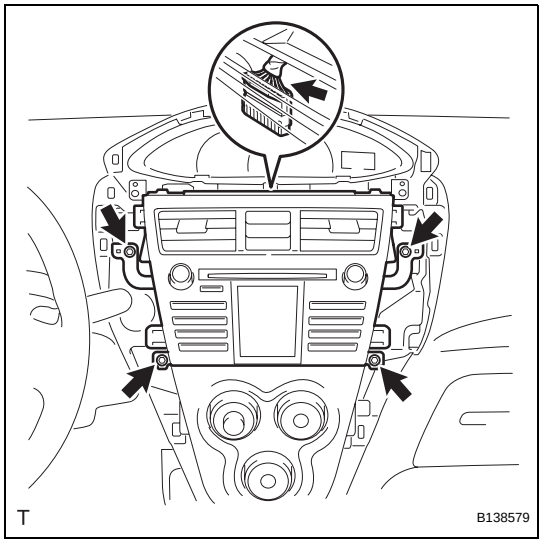


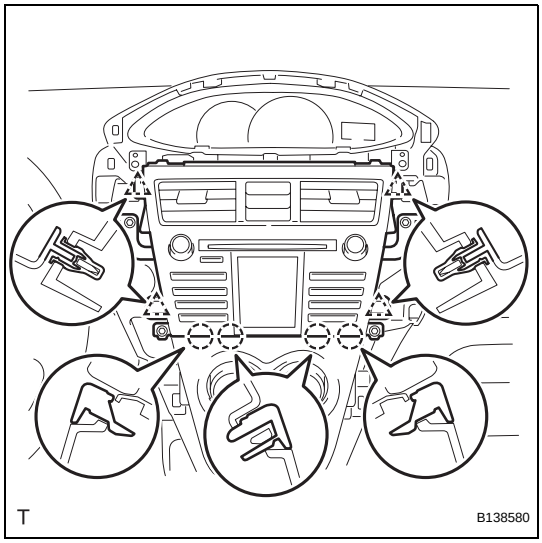


      (3) Disengage the 4 clips and the 4 claws and remove the radio receiver.

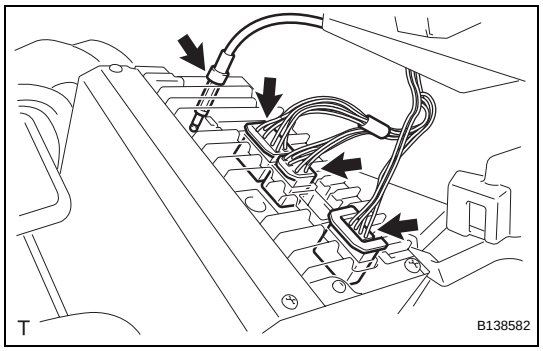

(4) Disconnect the plug.
(5) Disconnect the 3 radio connectors.

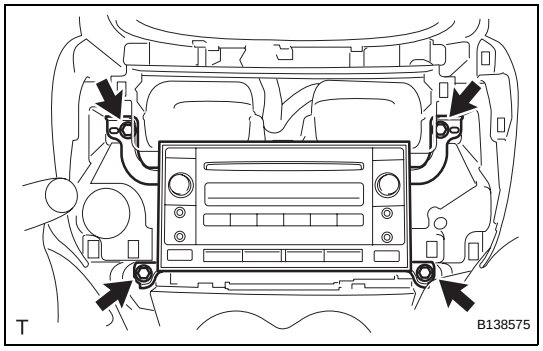

(b) except Integrated with Panel:
(1) Remove the 4 bolts and the radio receiver.

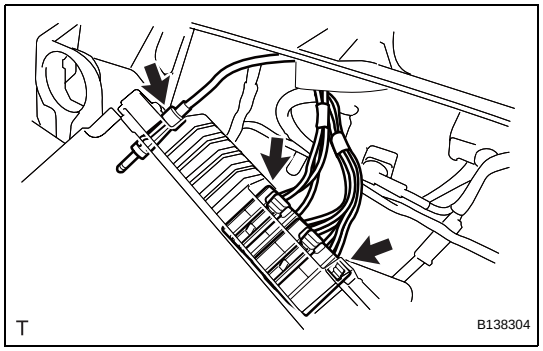

(2) Disconnect the plug.
(3) Disconnect the 2 radio connectors.