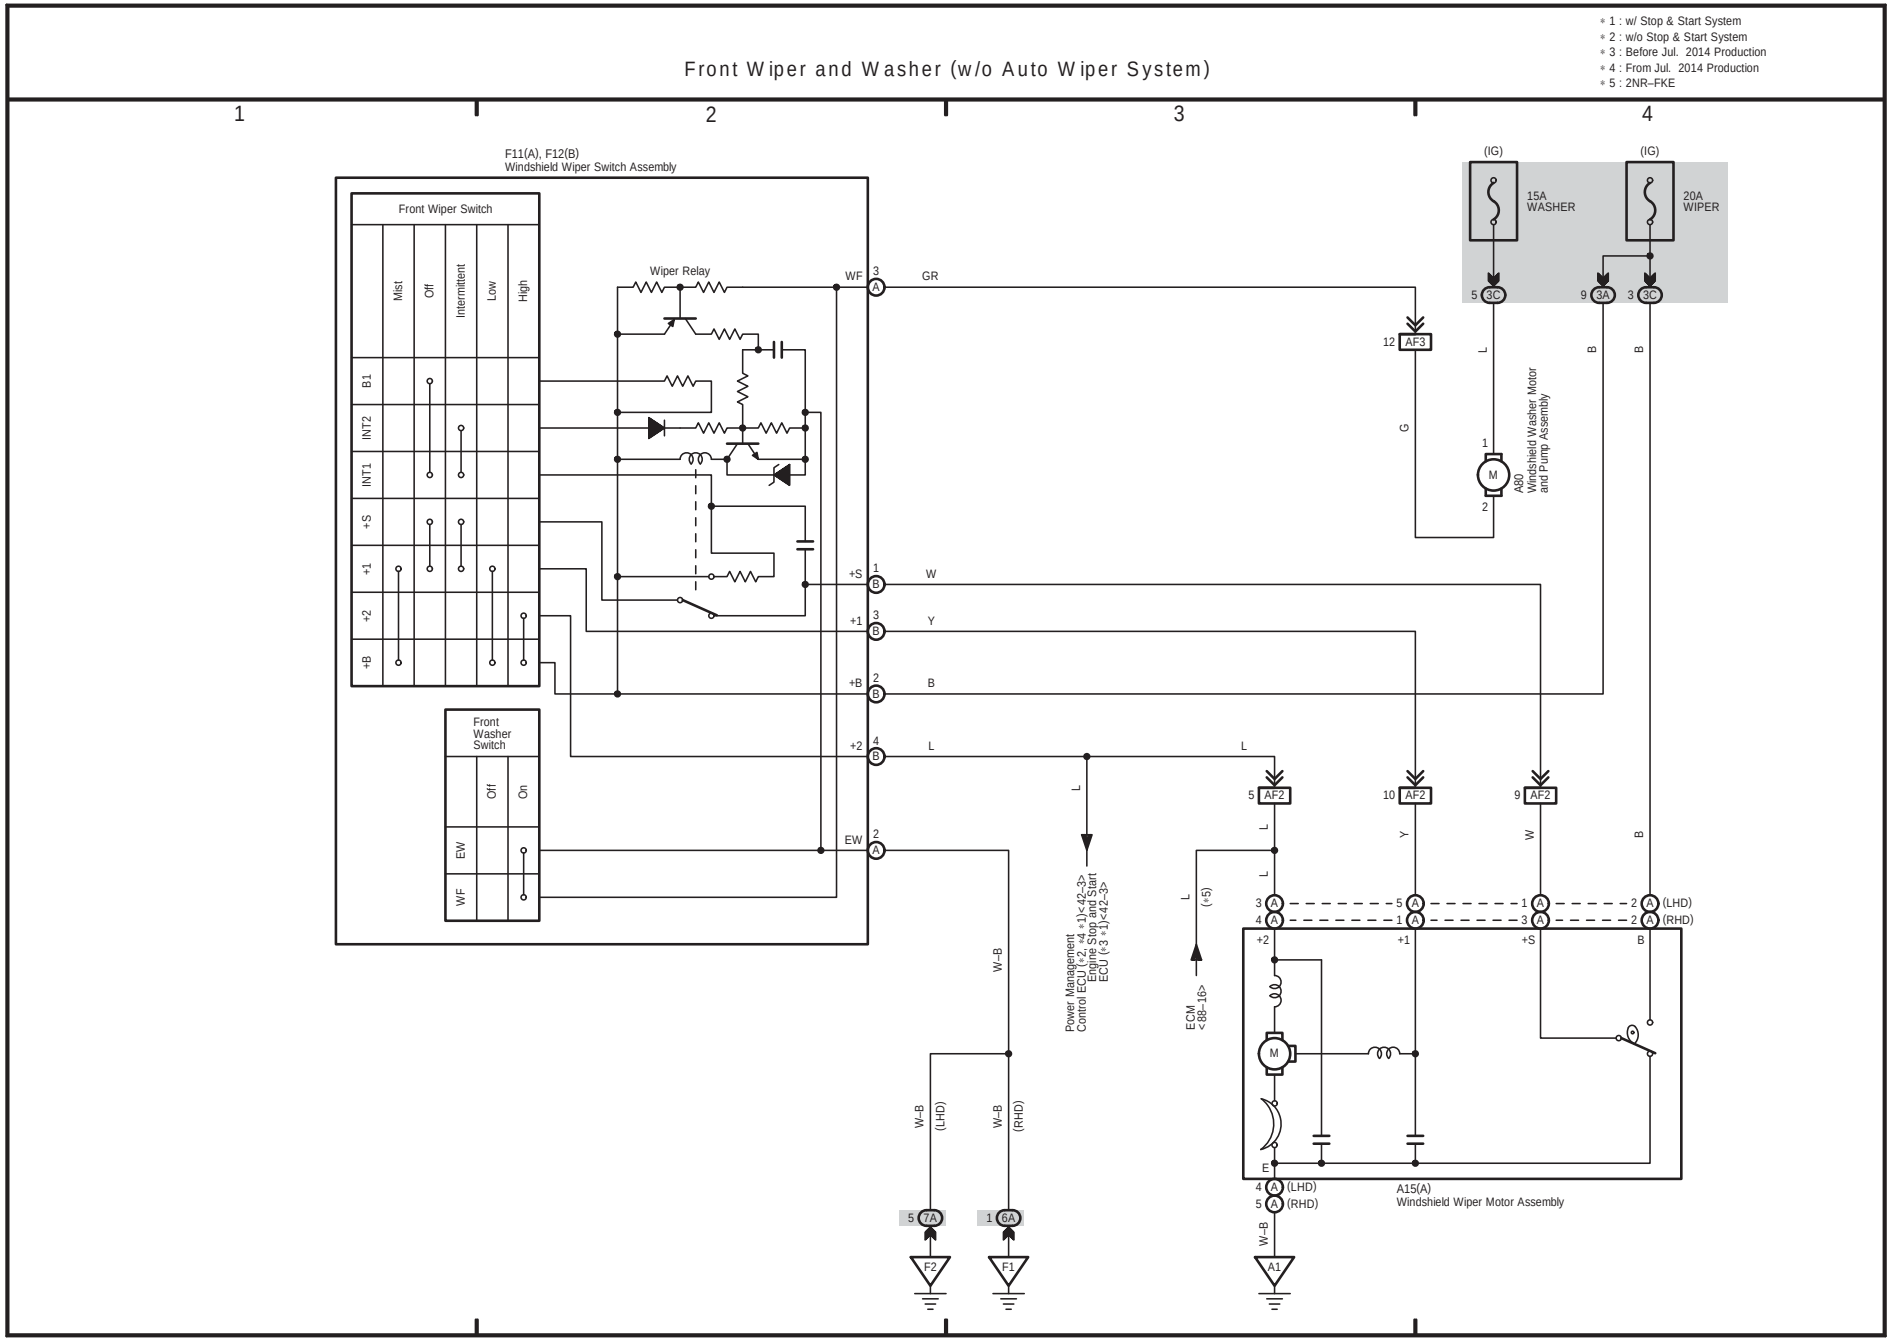

Front Wiper and Washer (w/o Auto Wiper System)
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
* 3 : Before Jul. 2014 Production
* 4 : From Jul. 2014 Production
* 5 : 2NR–FKE
1
2
3
4
F11(A), F12(B)
Windshield Wiper Switch Assembly
Front Wiper Switch
Mist
Off
Intermittent
Low
High
B1
INT2
INT1
+S
+1
+2
+B
Wiper Relay
Front Washer Switch
Off
On
EW
WF
WF 3 A
EW 2 A
+S 1 B
+1 3 B
+B 2 B
+2 4 B
GR
W
Y
B
L
W–B
(IG)
15A WASHER
20A WIPER
5 3C
9 3A
3 3C
12 AF3
A80 Windshield Washer Motor and Pump Assembly
5 AF2
10 AF2
9 AF2
Power Management Control ECU (1 <4 <1)<42–3>
Engine Control ECU (3 <4 <1)<42–3>
Main Body ECU and Start ECU (4 <1)<42–3>
ECM <88–16>
(+5)
A15(A) Windshield Wiper Motor Assembly
(LHD)
(RHD)
5 7A
1 6A
F2
F1
A1